

## Auxiliary Switches

### Special Tool(s) / General Equipment


Interior Trim Remover

### Removal


**NOTE:** Removal steps in this procedure may contain installation details.

**NOTE:** RHD (right-hand drive) shown, LHD (left-hand drive) similar.


1. Releasing the rear auxiliary switch trim panel clips.
  1. Using a interior trim remover, gently pry up to release the auxiliary switch trim panel rear clip. Use the General Equipment: Interior Trim Remover
  2. Lift the rear slightly to disengage the second rear clip.

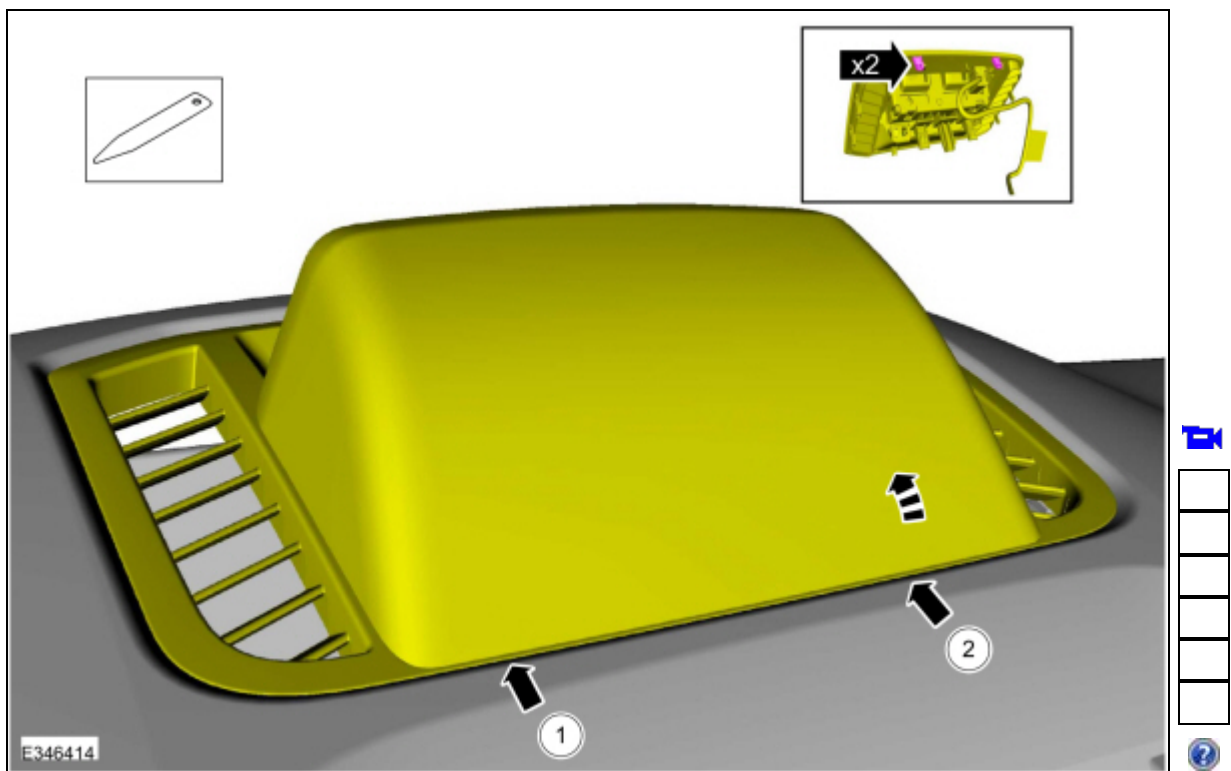

2. Moving to the front and side using a interior trim remover, gently pry up at the side and front to disengage all the auxiliary switch trim panel hooks and clips. Use the General Equipment: Interior Trim Remover

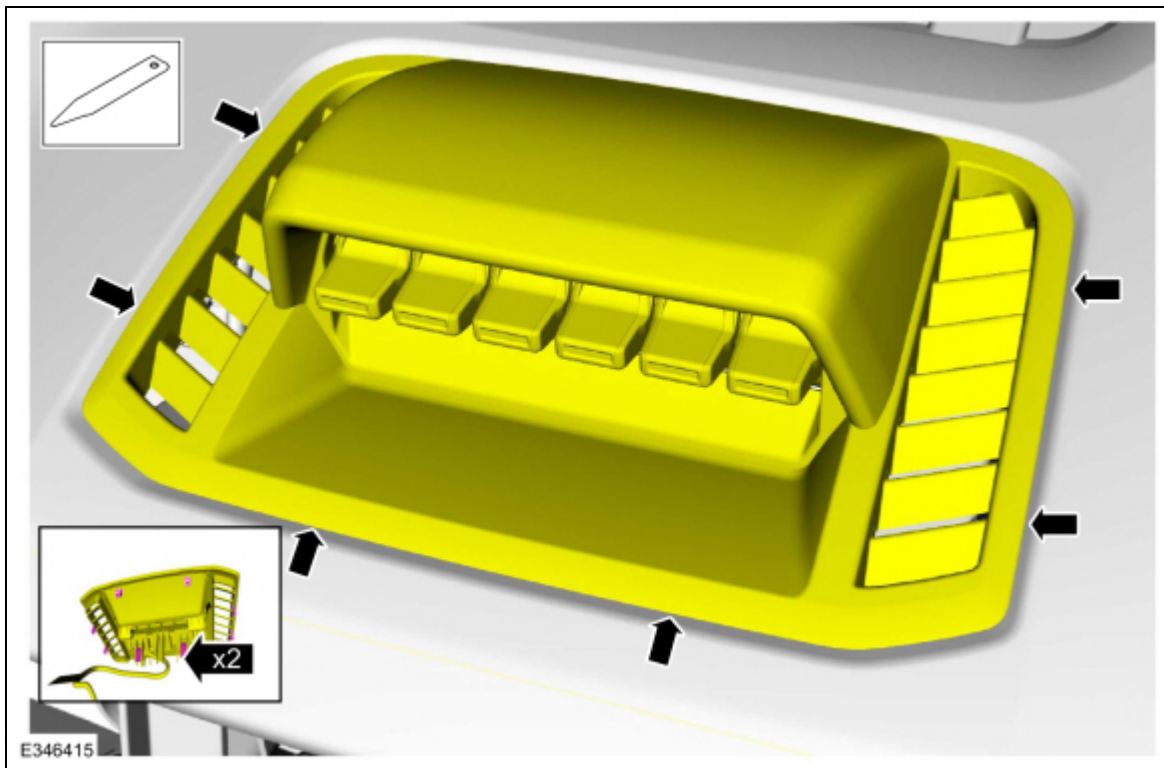

3. Disconnect the auxiliary switch electrical connector and remove the auxiliary switch.

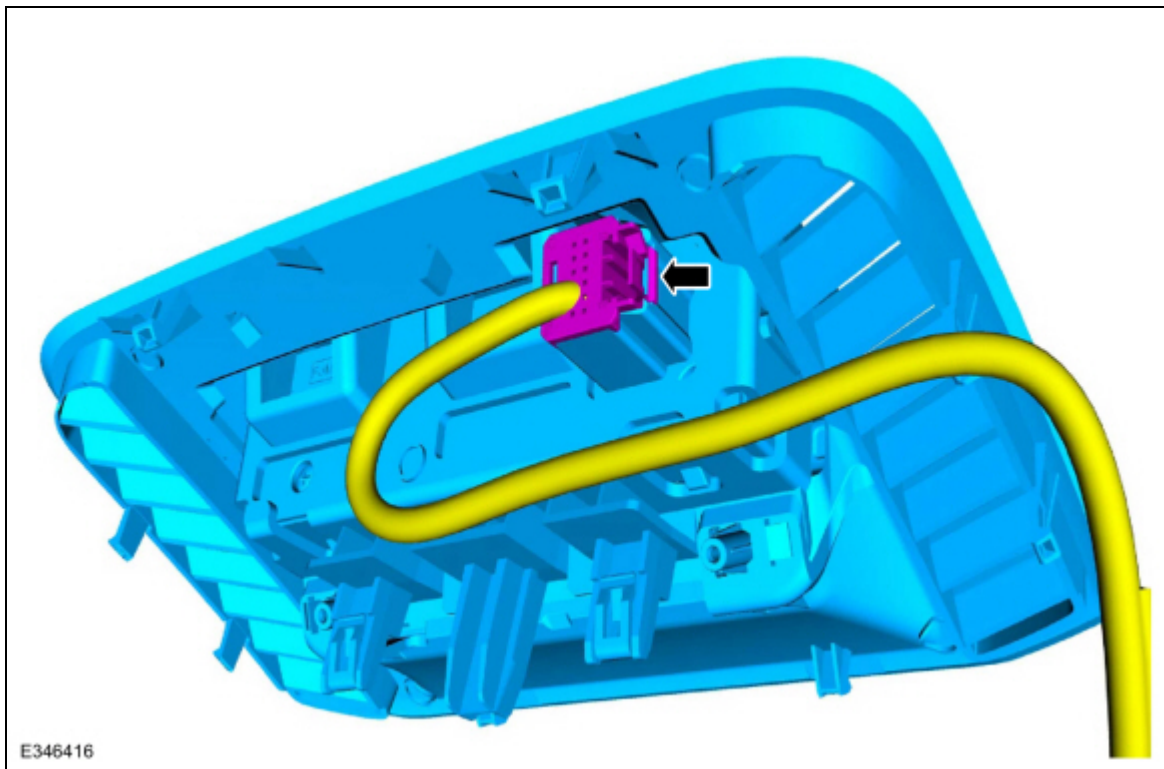

## Installation

1. To install, reverse the removal procedure.

© Copyright 2021, Ford Motor Company.

