

DIFFERENTIAL PRESSURE FEEDBACK EXHAUST GAS RECIRCULATION (EGR) SENSOR

303-08 Engine Emission Control - 2.3L EcoBoost
(201kW/273PS)
Removal and Installation


2020 Ranger

Differential Pressure Feedback Exhaust Gas Recirculation (EGR) Sensor


Removal

NOTE: Removal steps in this procedure may contain installation details.


1.
 - Disconnect the electrical connector.
 - Loosen the clamps and position aside the differential pressure sensor hoses.

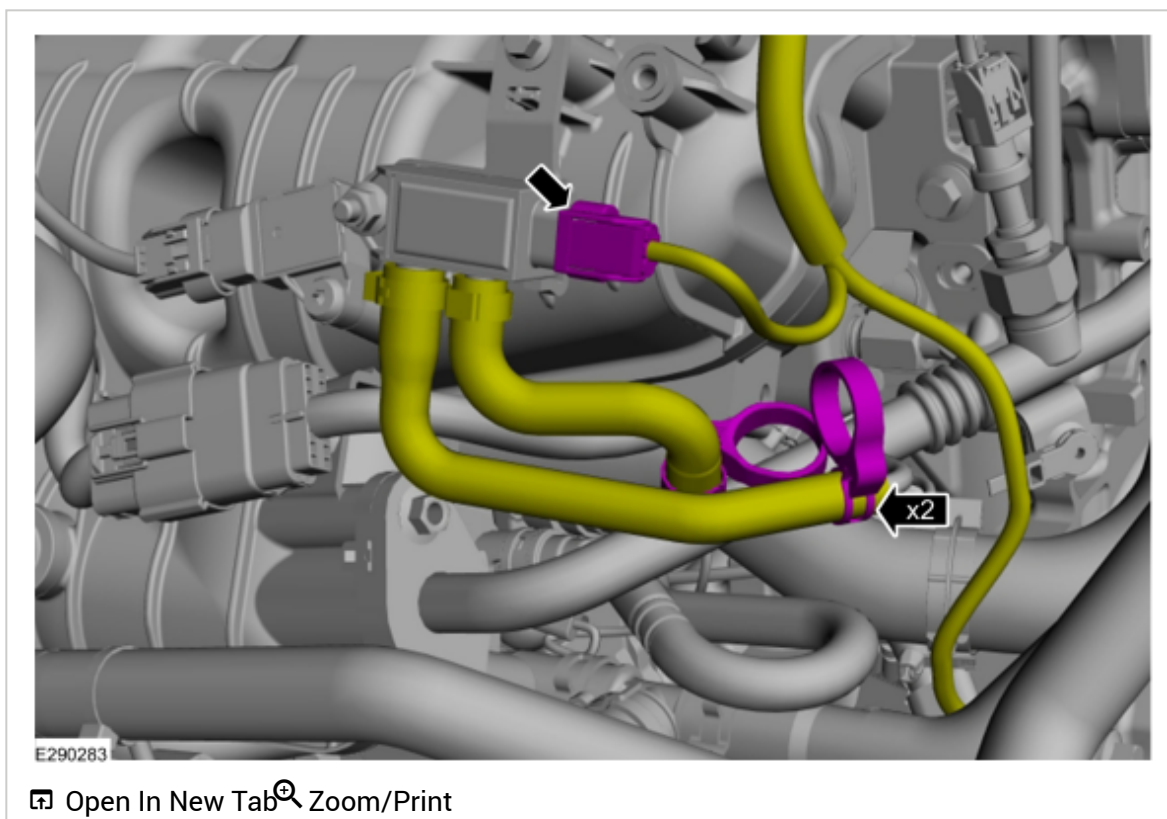

2. Remove the fastener and differential pressure feedback EGR sensor.
Torque : 97 lb.in (11 Nm)

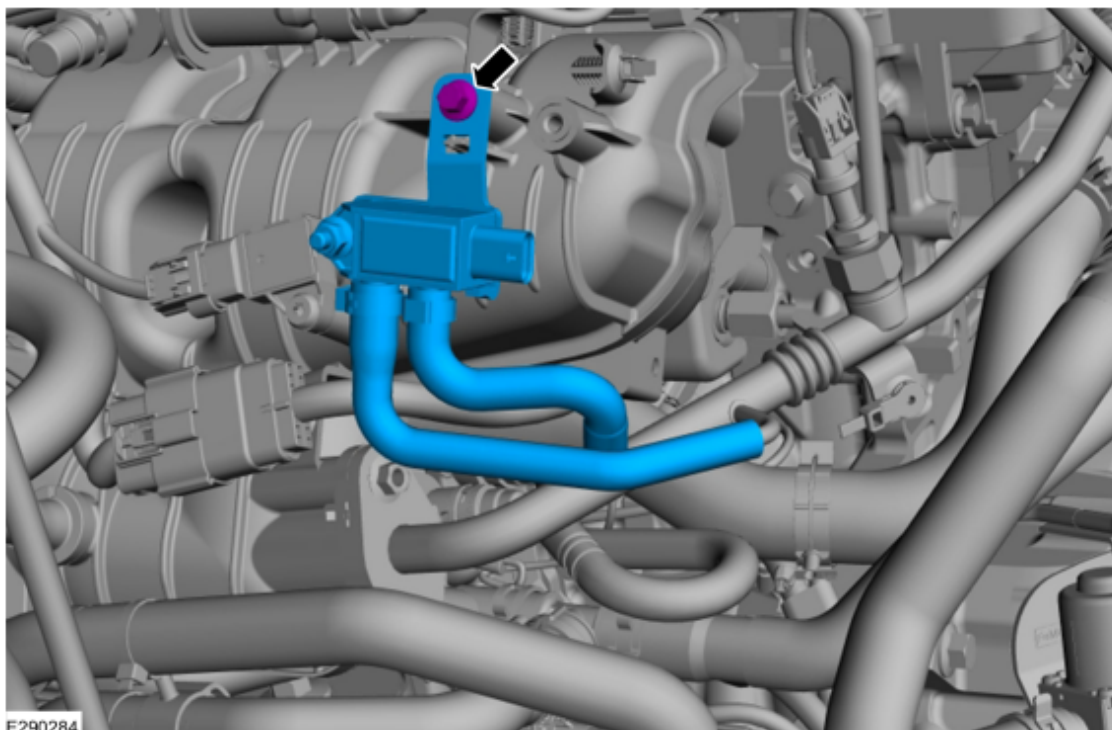

[Open In New Tab](#) [Zoom/Print](#)

 

Installation

1. To install, reverse the removal procedure.
-