


# Floor Console Upper Trim Panel Removal Procedure

## Recommended Tool List:


General Tools	General Equipment
1/4" Drive <a href="#">Ratchet</a> (Power and Hand Tool)	
1/4" Drive 25 <a href="#">TORX®</a>	
1/4" Drive 3" Extension	
1/4" Drive 7mm <a href="#">Shallow Socket</a>	
1/4" Drive <a href="#">Torque Wrench</a>	
Plastic <a href="#">Trim Tool</a>	<b>Special Tools</b>
<a href="#">Flashlight</a>	

1. Using a plastic [trim tool](#), release the retainers and remove the lower RH center stack trim panel. See Figure 1.

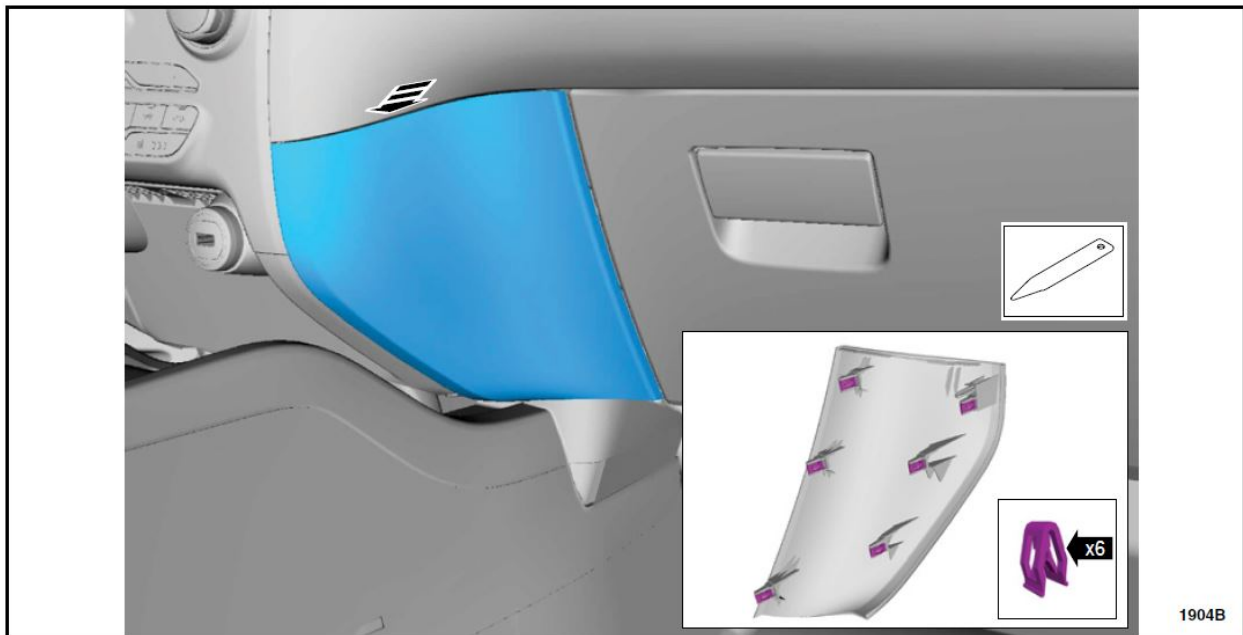


[FIGURE 1](#)

2. Using a plastic [trim tool](#), release the two inboard retainers and position the [steering column](#) opening trim panel rearward. See Figure 2.

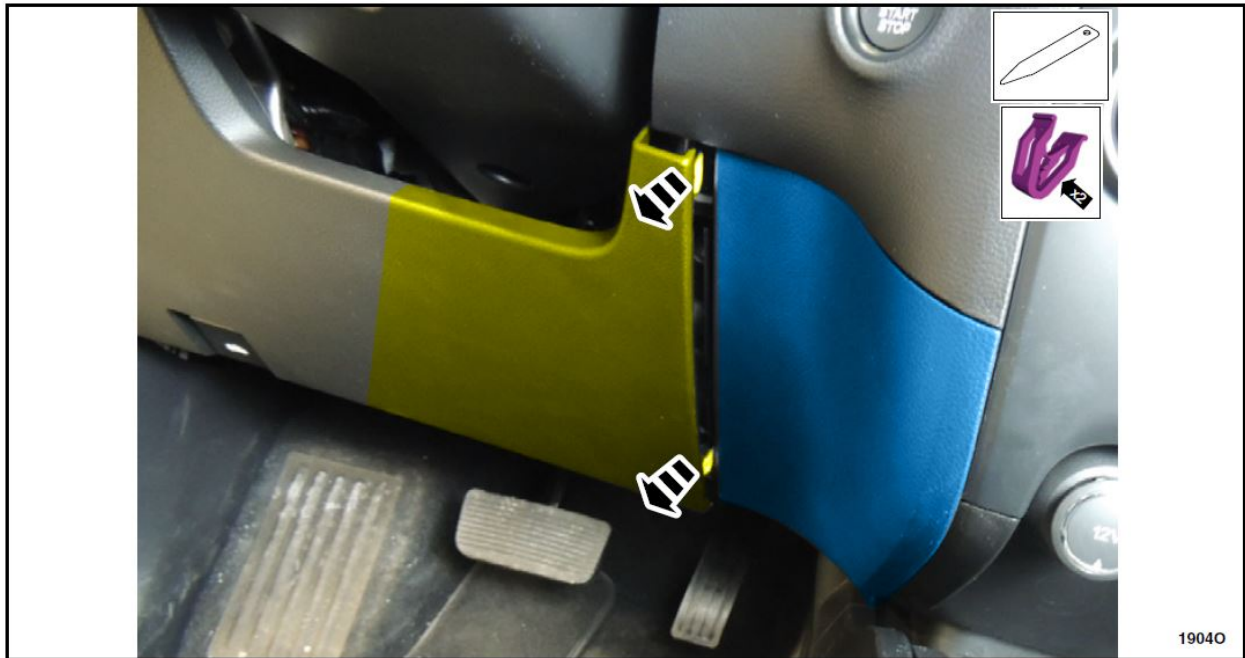

[FIGURE 2](#)

3. Using a plastic [trim tool](#), release the retainers and remove the lower LH center stack trim panel. See Figure 3.

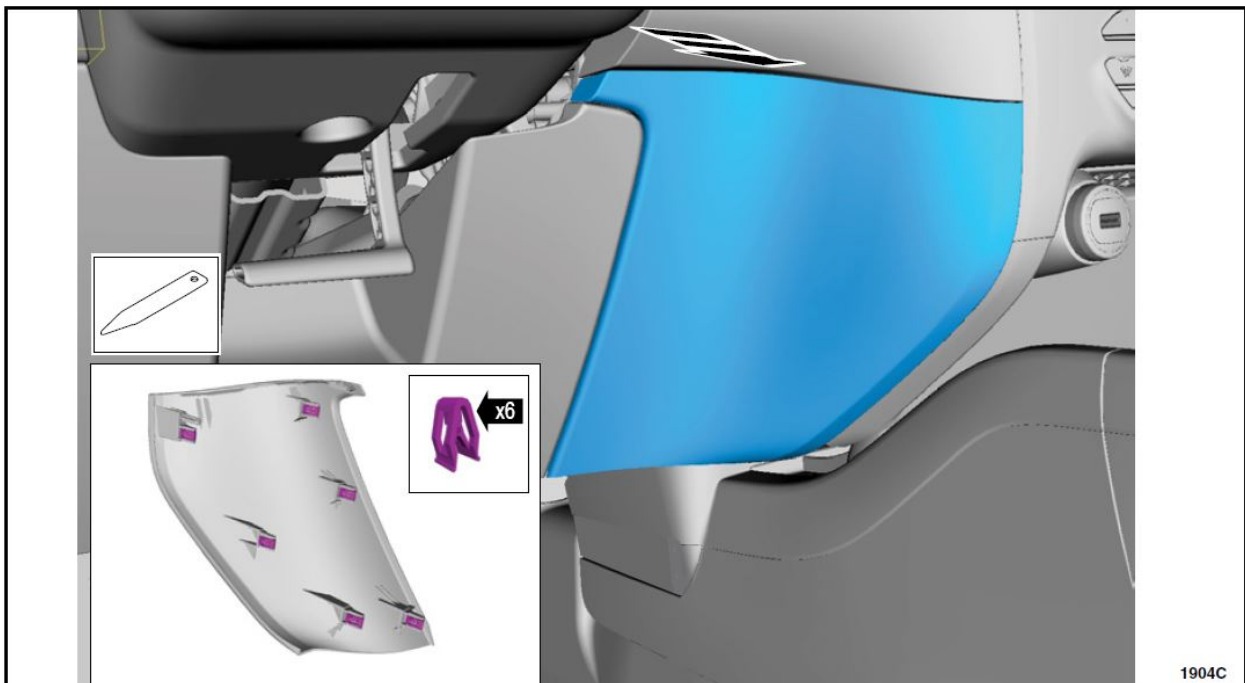

[FIGURE 3](#)

4. Remove the retainers, disconnect the electrical connectors and remove the lower center stack trim panel. See Figure 4.

- Torque: 17 lb.in (1.9 Nm)

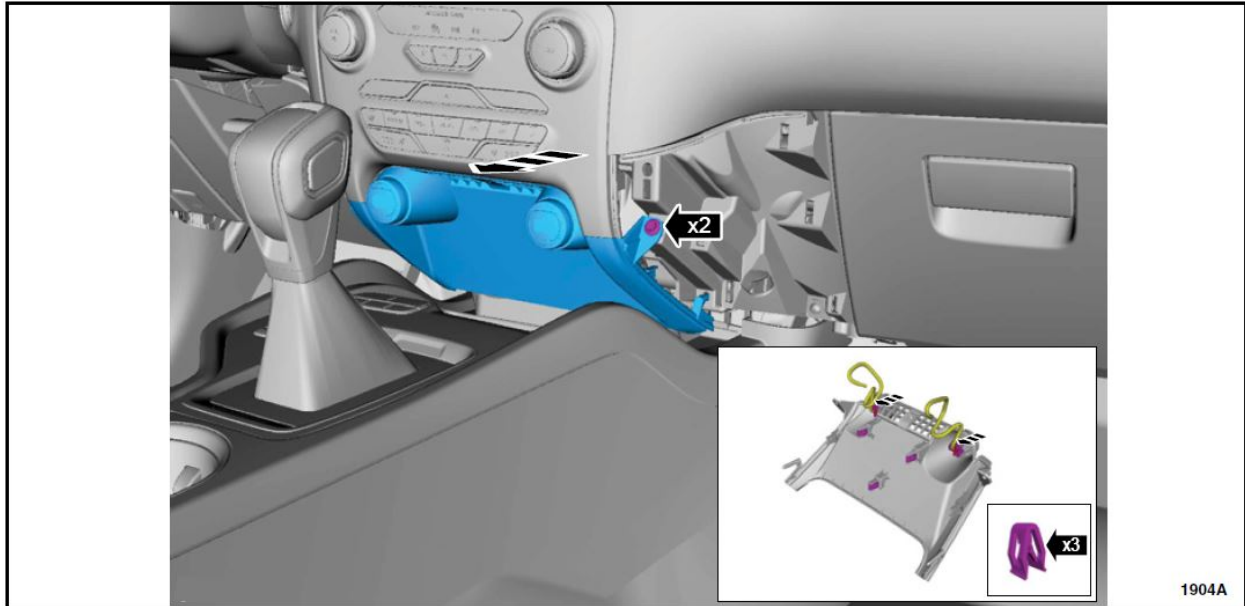


FIGURE 4

5. Using a plastic [trim tool](#), release the retainers, disconnect the electrical connectors and remove the floor console upper trim panel. See Figure 5.

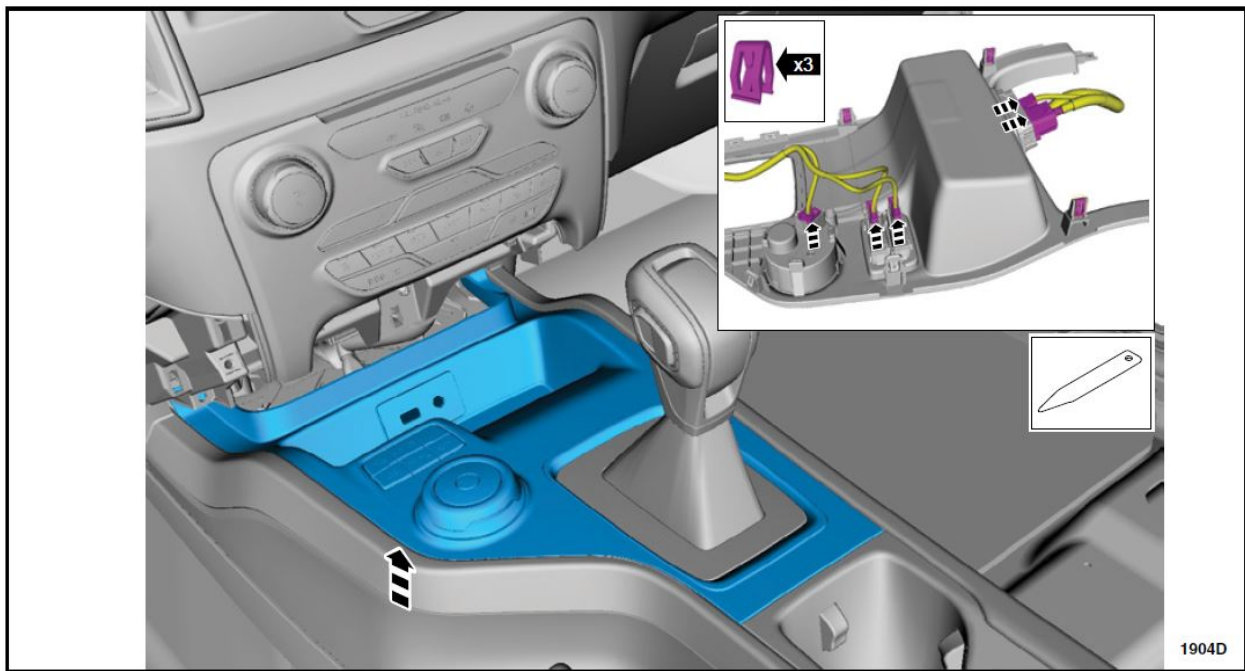


FIGURE 5

