


086-002 FOG LAMPS

| | |
|--------------------|------------------|
| Section 086 | Fog Lamps |
| Part | 001, 002 |

FRONT FOG LAMPS

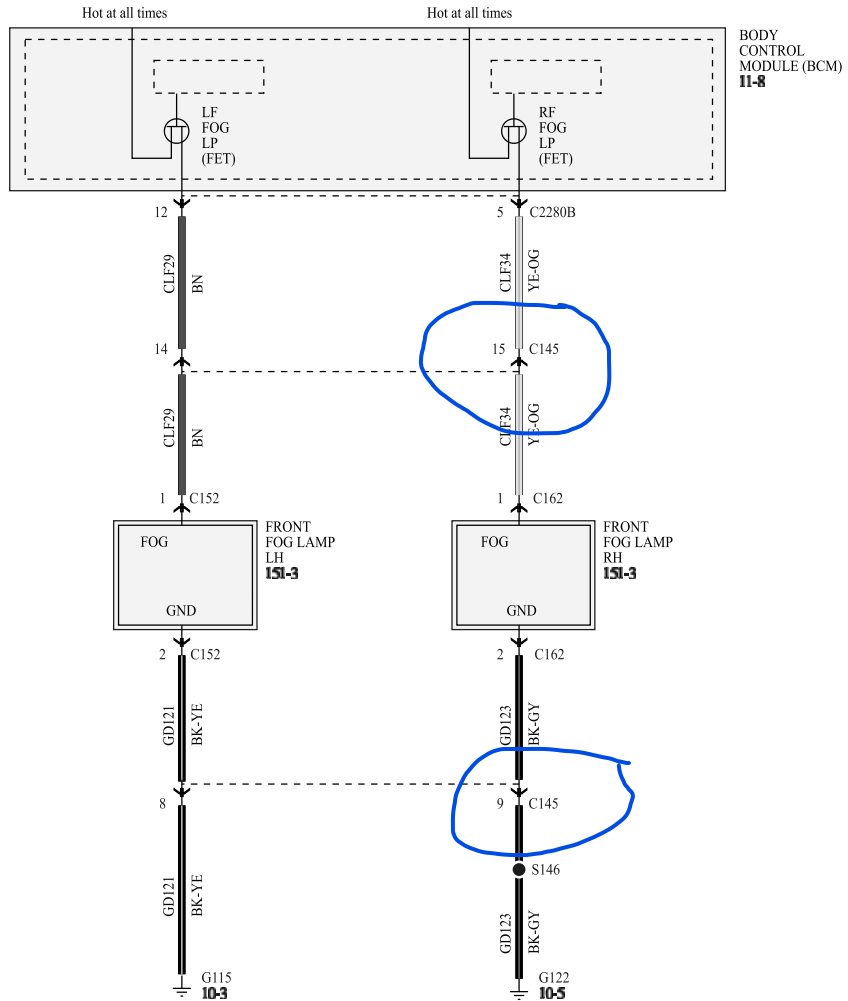

Look connector C145, both Power and Ground are in the connector, LF Engine Bay
See other Pic - In this diagram it appears that there are 2 C145 but there is just (1)