
Front Seat Cushion Cover

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: Driver seat shown except where called out.

1. Remove the front seat.
Refer to: [Front Seat](#) (501-10A Front Seats, Removal and Installation).
2. Remove the front seat side shield screws.




E293200

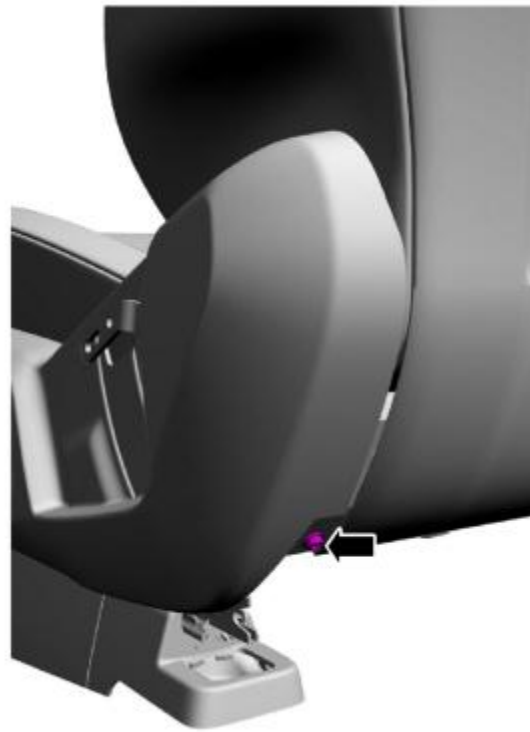

Vehicles with manual seats


Vehicles with manual seats

3.
 - Release the tab and remove the front seat recline handle cover.
 - Remove the clip and the front seat height adjust handle cover.

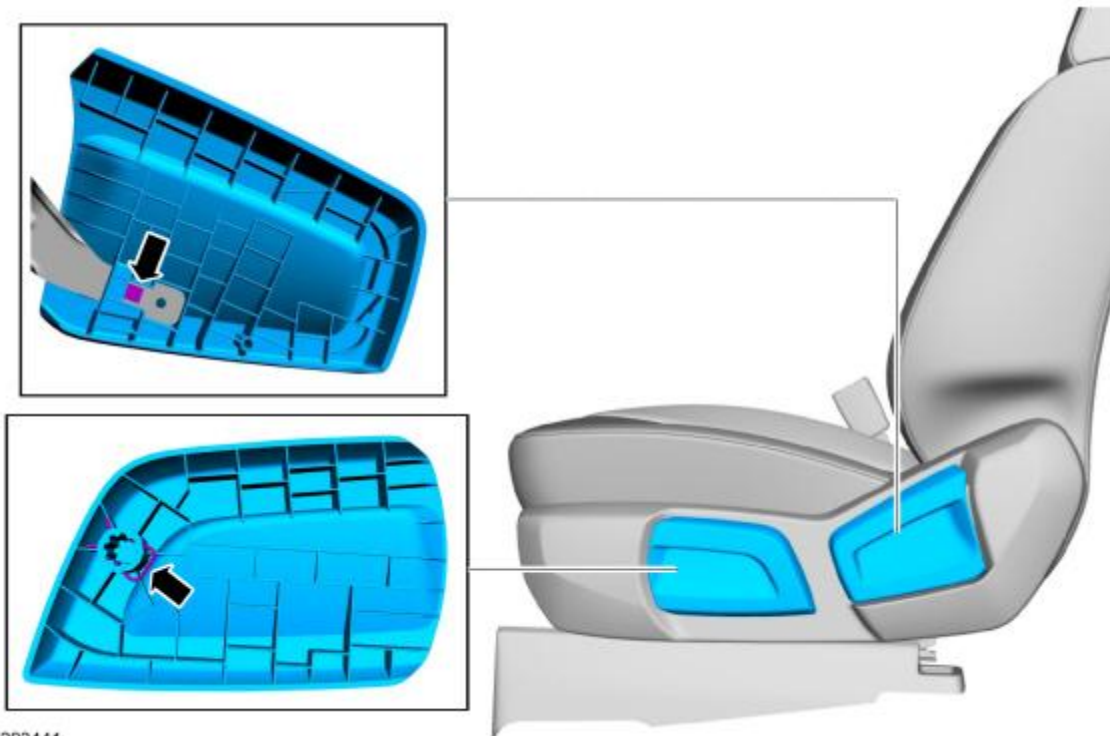

E293441

4. Remove the front seat side shield.
 1. Lift up on the rear of the side shield and pull outward.
 2. Pull the side shield out to clear the height adjust handle.
 3. Push the side shield forward.

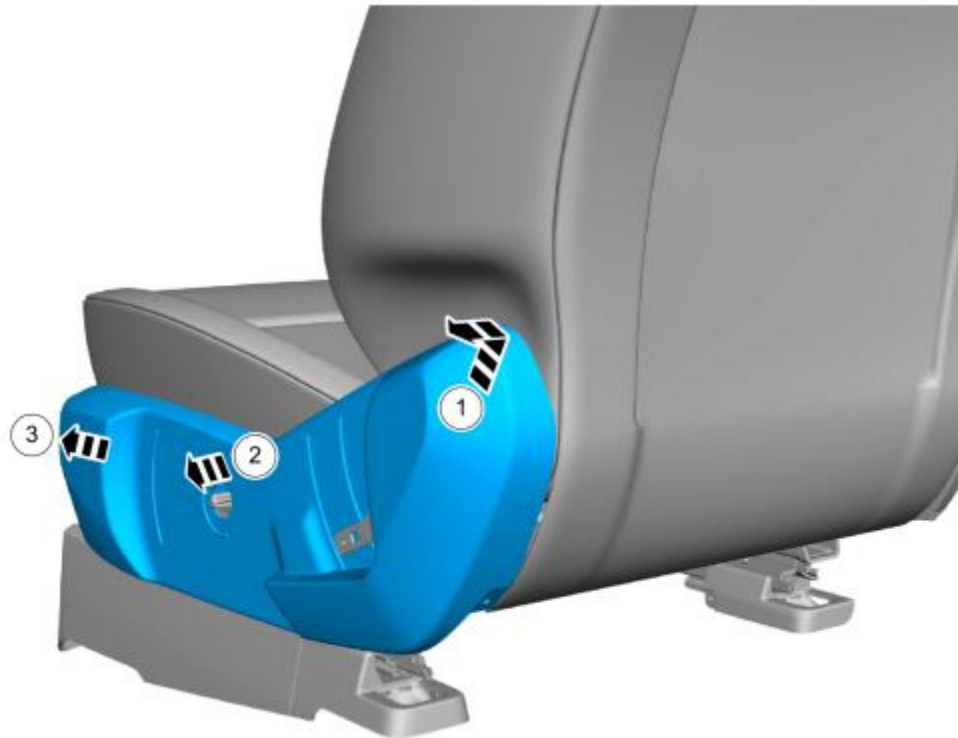


E293442



Vehicles with power seats

Vehicles with power seats



5. Release the retainers and remove the front seat recline handle cover.

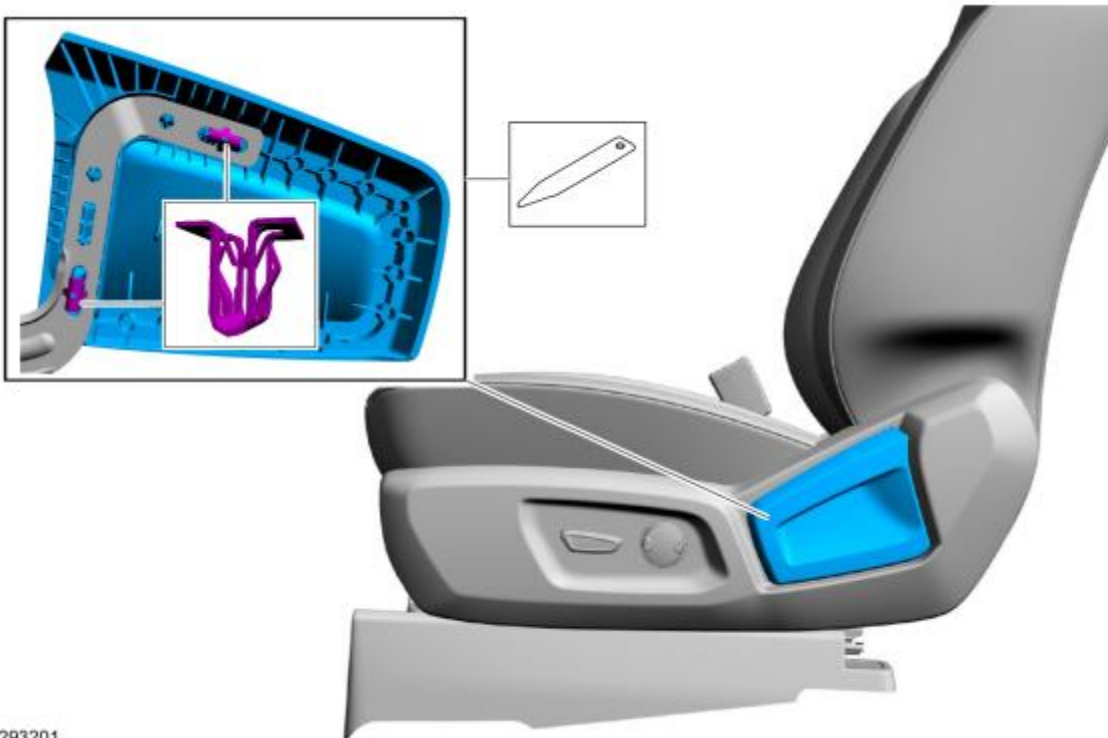

E293201



6. Remove the front seat side shield.
 1. Lift up on the rear of the side shield and pull outward
 2. Push the side shield forward.
 3. Disconnect the electrical connector.

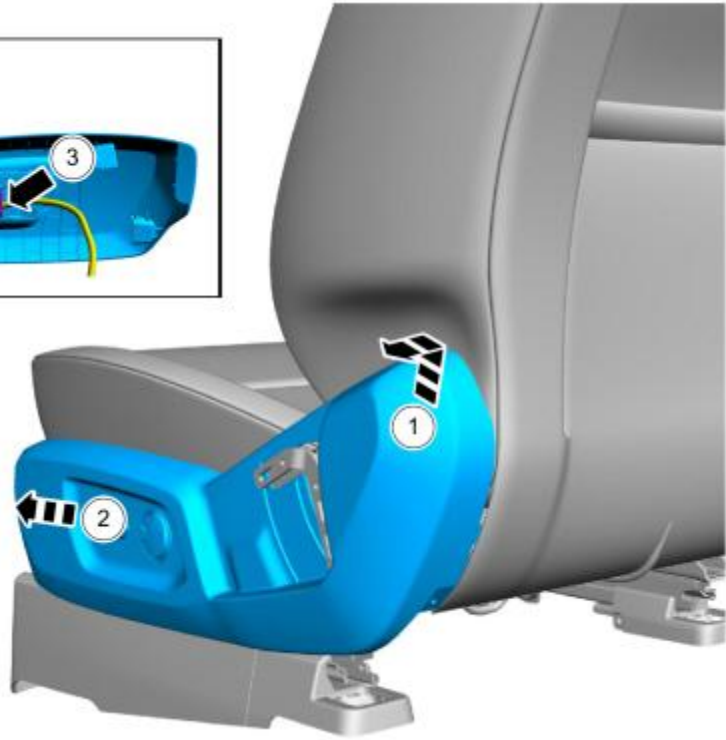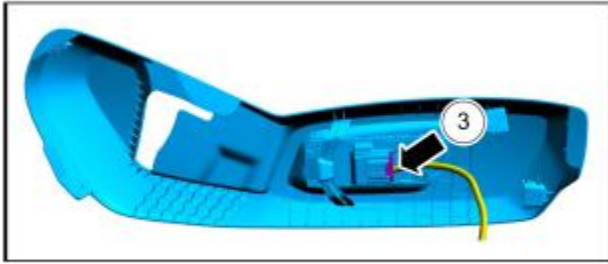

E293202

