


Fuel Tank


Removal

NOTE: Removal steps in this procedure may contain installation steps.


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Release the fuel system pressure.
Refer to: [Fuel System Pressure Release](#) (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS), General Procedures).
3. Drain the fuel tank.
Refer to: [Fuel Tank Draining](#) (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS), General Procedures).
4. If equipped, remove the nuts and fuel tank skid plate.
Torque : 133 lb.in (15 Nm)

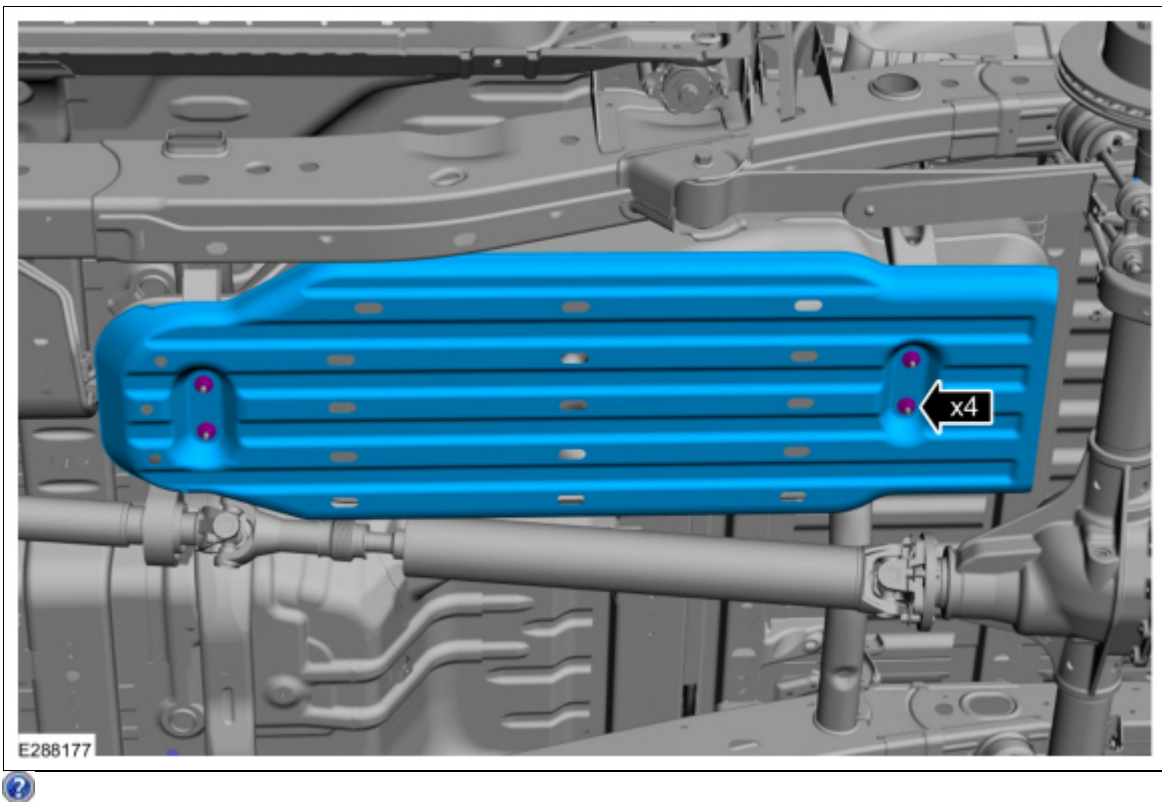


5. Disconnect the electrical connector and fuel lines quick release couplings.
Refer to: [Quick Release Coupling](#) (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS), General Procedures).

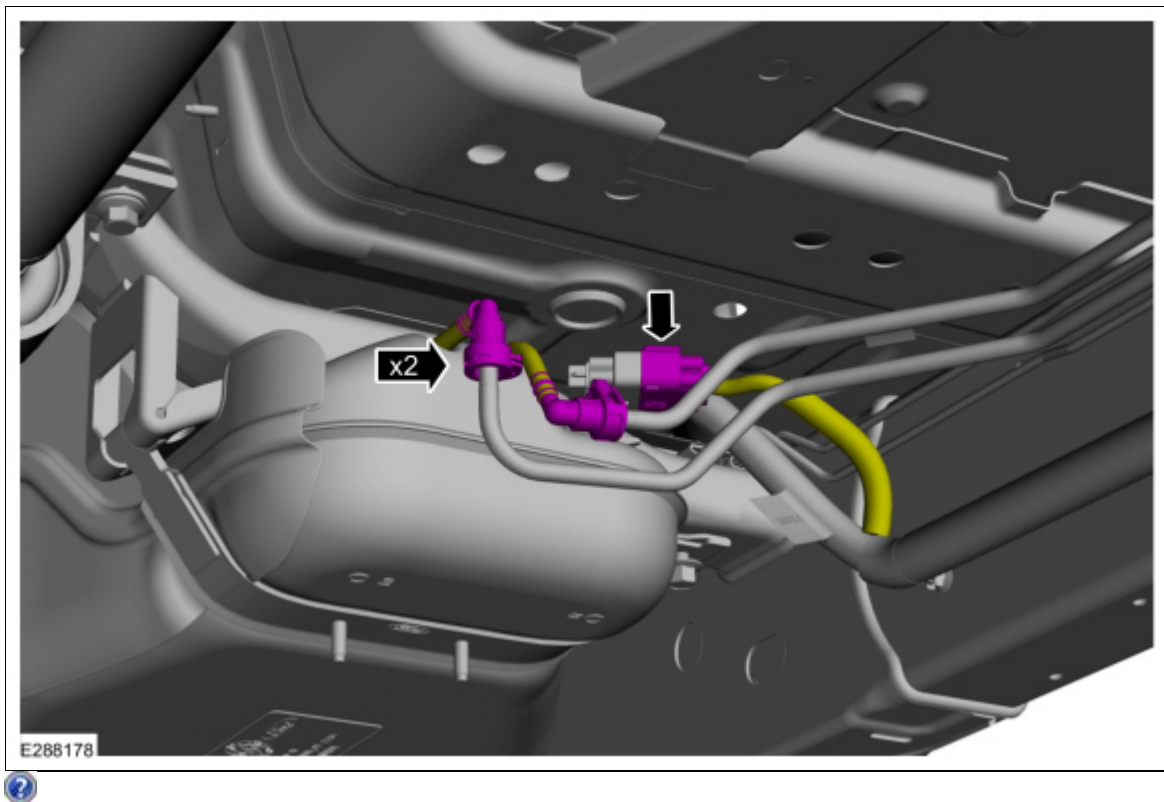

6. Disconnect the EVAP canister vent tube.

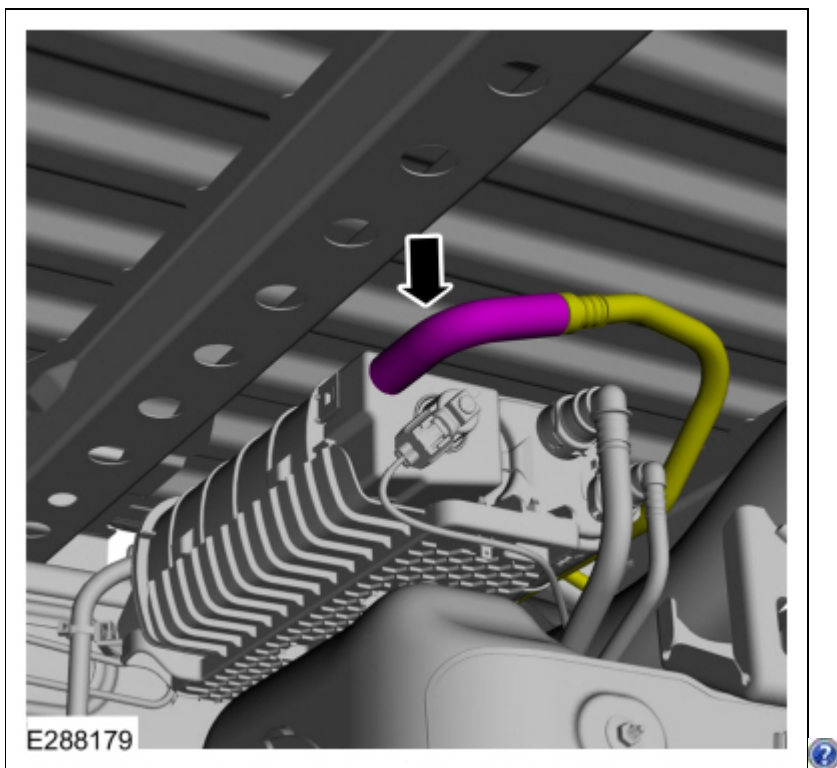


7. Detach the axle vent tube retainer clip and position aside the hose.

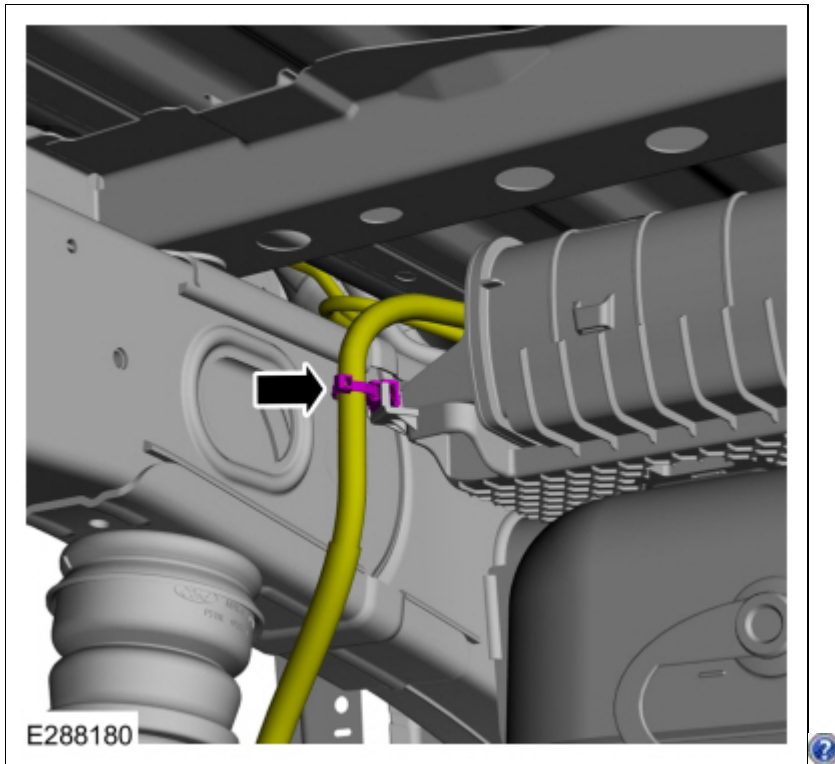


8.

- Remove the bolts and fuel tank support straps.
Use the General Equipment: Transmission Jack
Torque : 35 lb.ft (47 Nm)
- Lower the fuel tank slowly to access the fuel tank vapor tube quick connector.
- Disconnect the fuel vapor tube quick connector.
Refer to: [Quick Release Coupling](#) (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS), General Procedures).

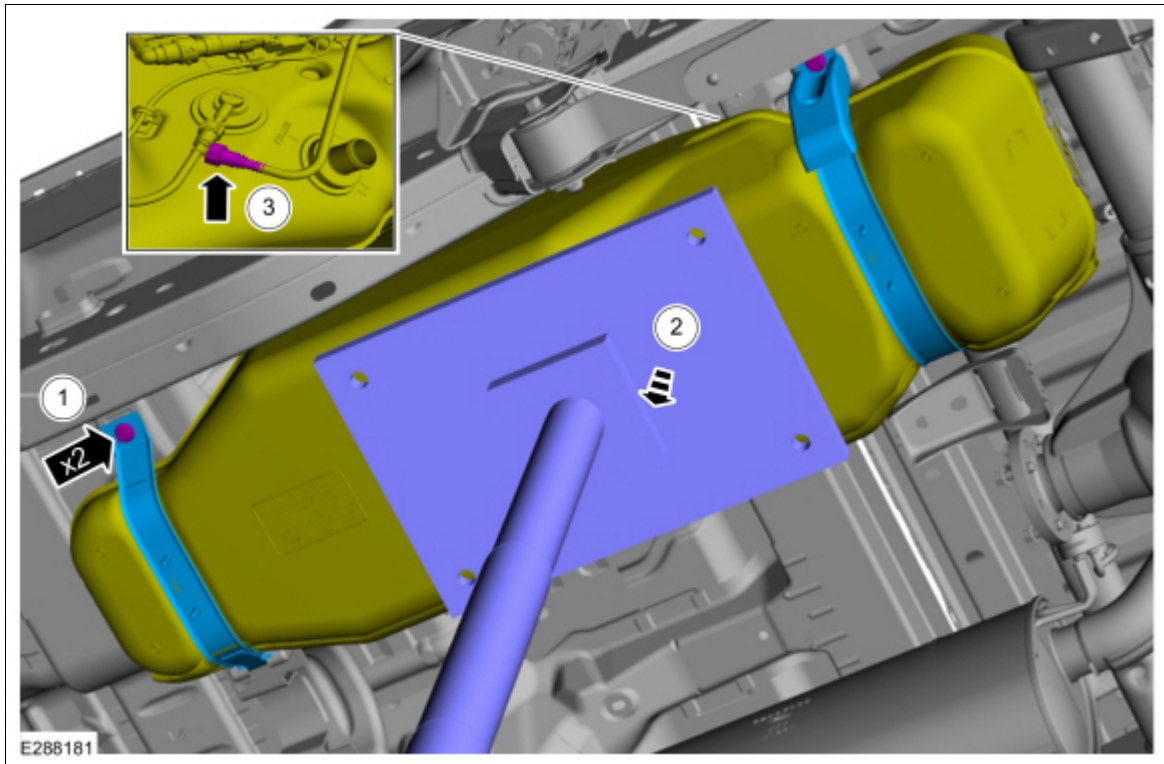


9. Remove the fuel tank and the EVAP canister as one assembly.

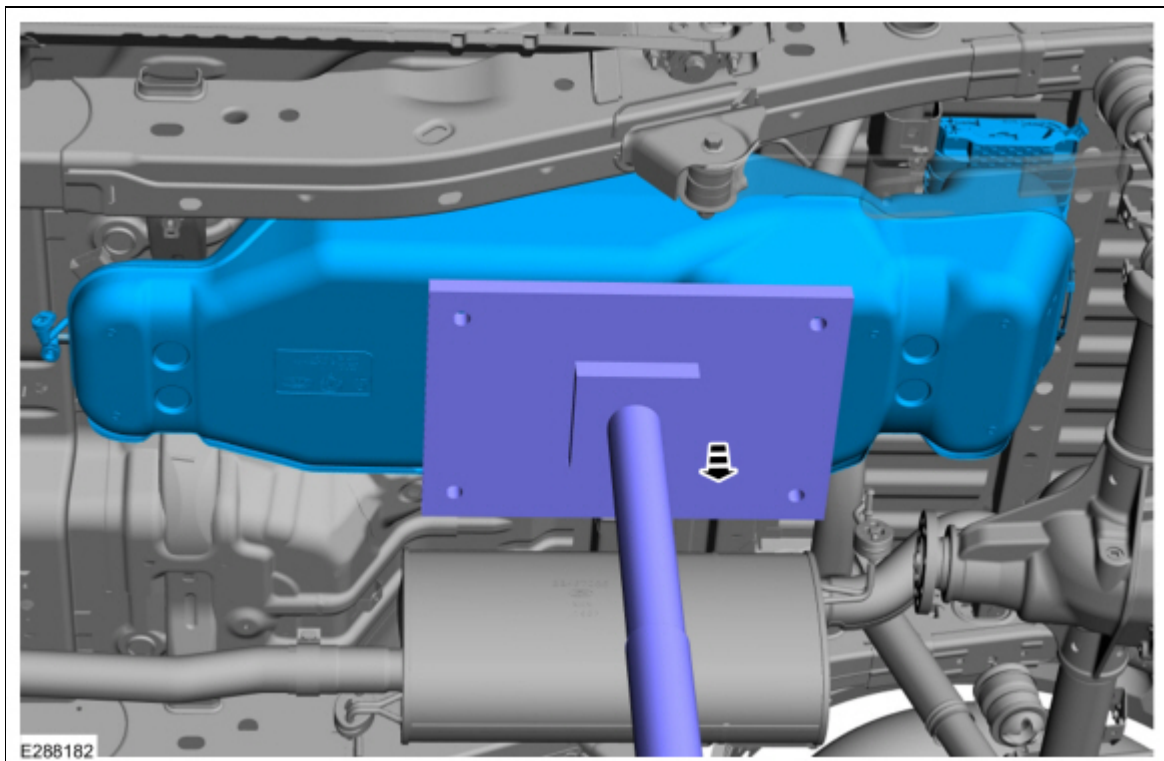

Installation

1.  **WARNING:** Make sure that all fuel connections are checked for leaks.

NOTE: Make sure that the insulator pads are correctly positioned on the fuel tank.

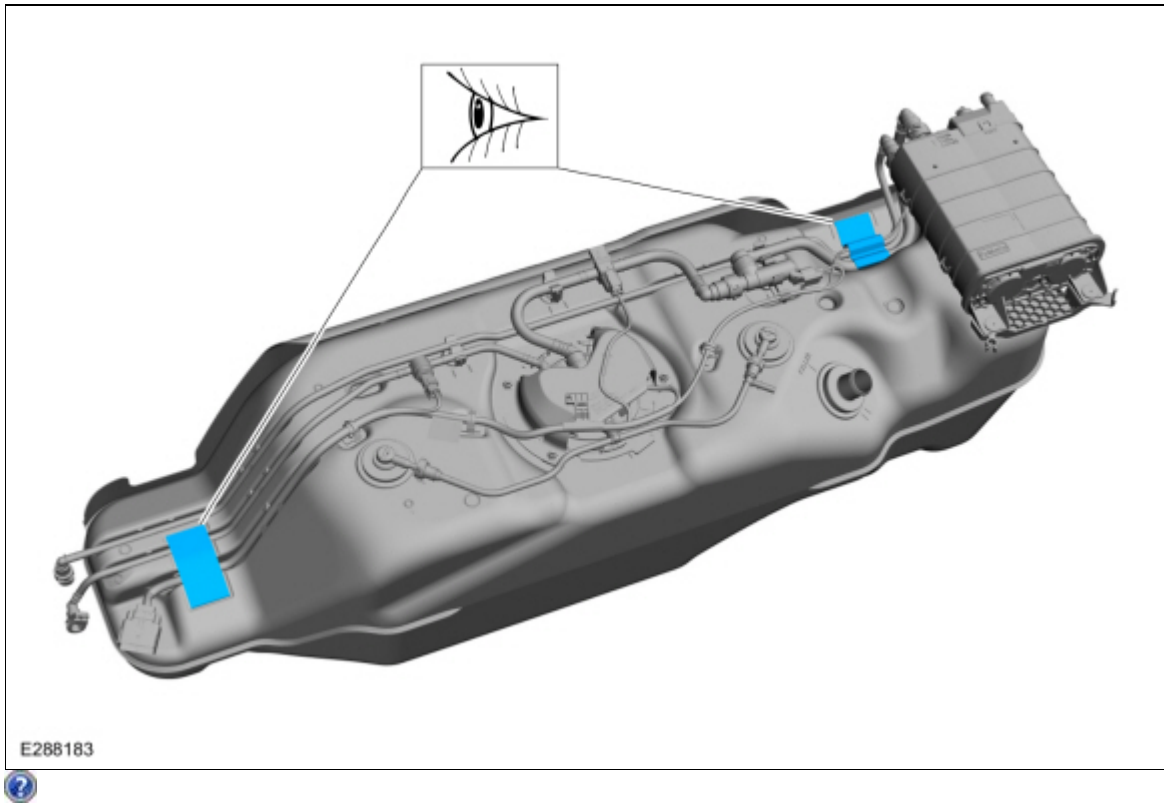

2. To install, reverse the removal procedure.