


## Horn


### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the LH front wheel and tire assembly.  
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove the push-pins and position the fender liner aside.

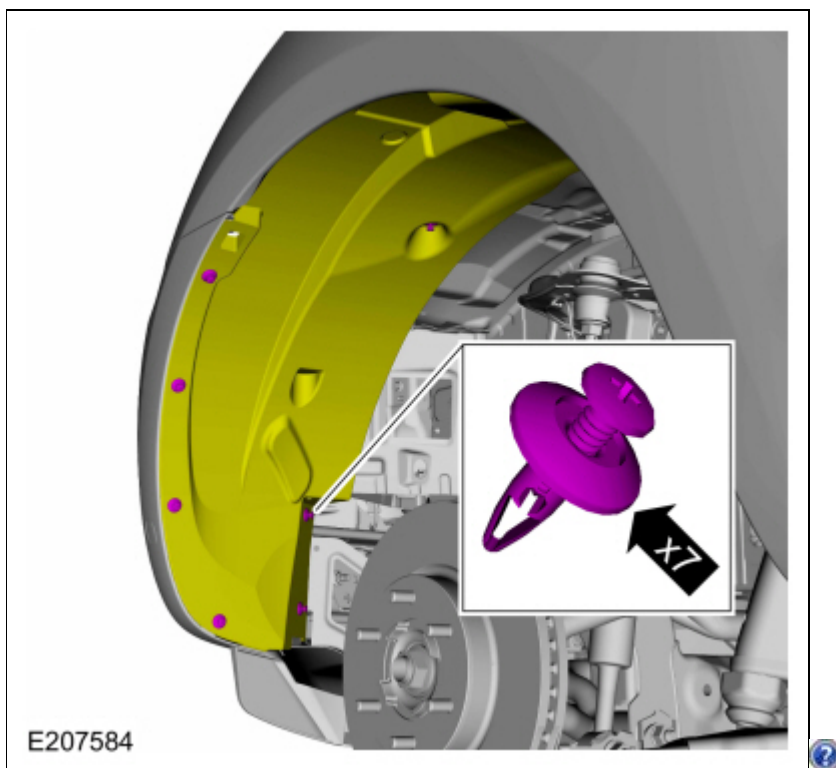

3. Remove the horn assembly.
  1. Disconnect the electrical connector.
  2. Remove the nut.  
*Torque* : 97 lb.in (11 Nm)
  3. Separate the wire harness retainer.

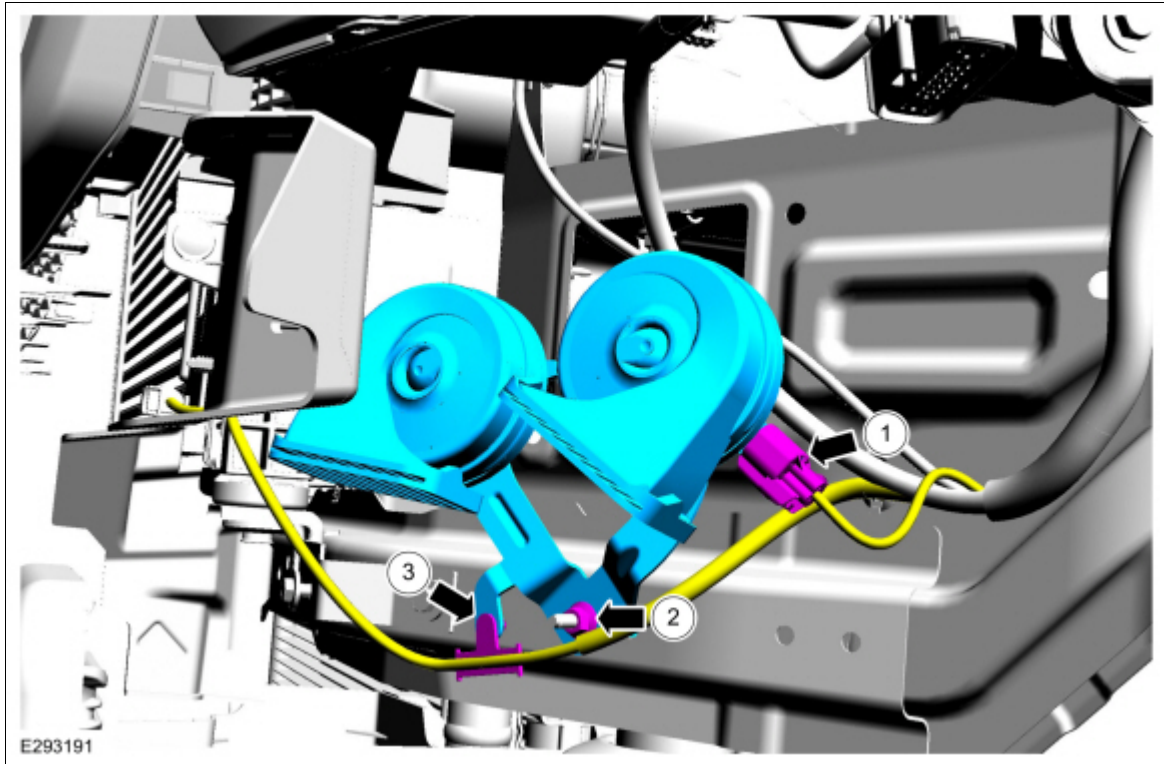

## Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company