

IN-VEHICLE TEMPERATURE AND HUMIDITY SENSOR

412-00 Climate Control System - General Information
Removal and Installation



2020 Ranger

In-Vehicle Temperature and Humidity Sensor


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the steering column opening trim panel.

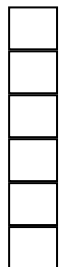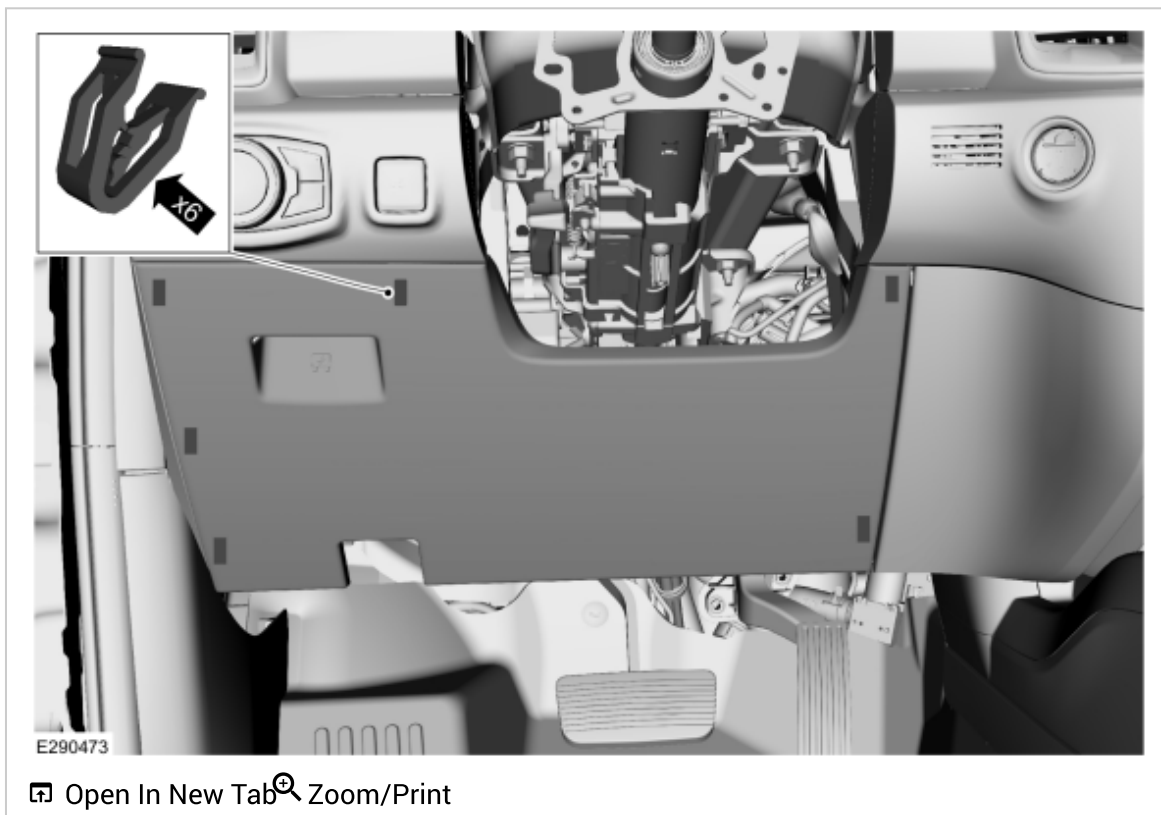



2. Remove the LH center stack trim panel.

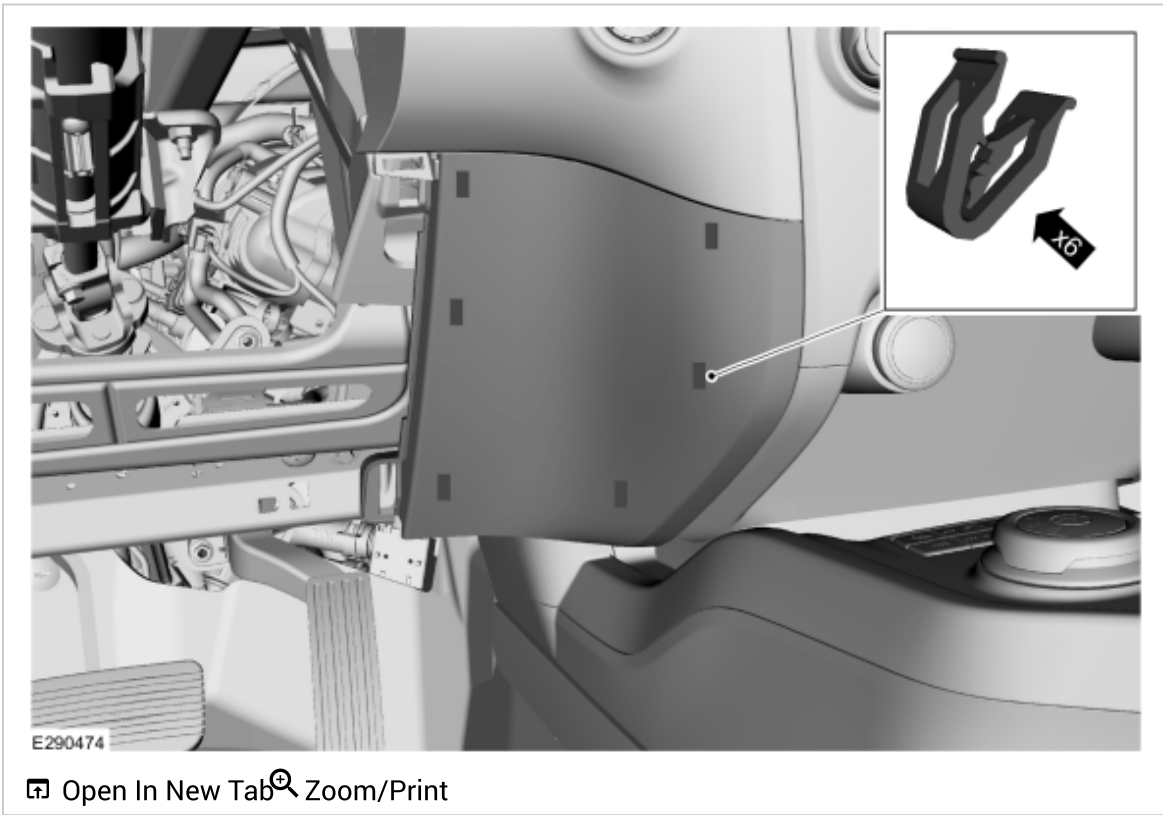



3. Remove the RH center stack trim panel.

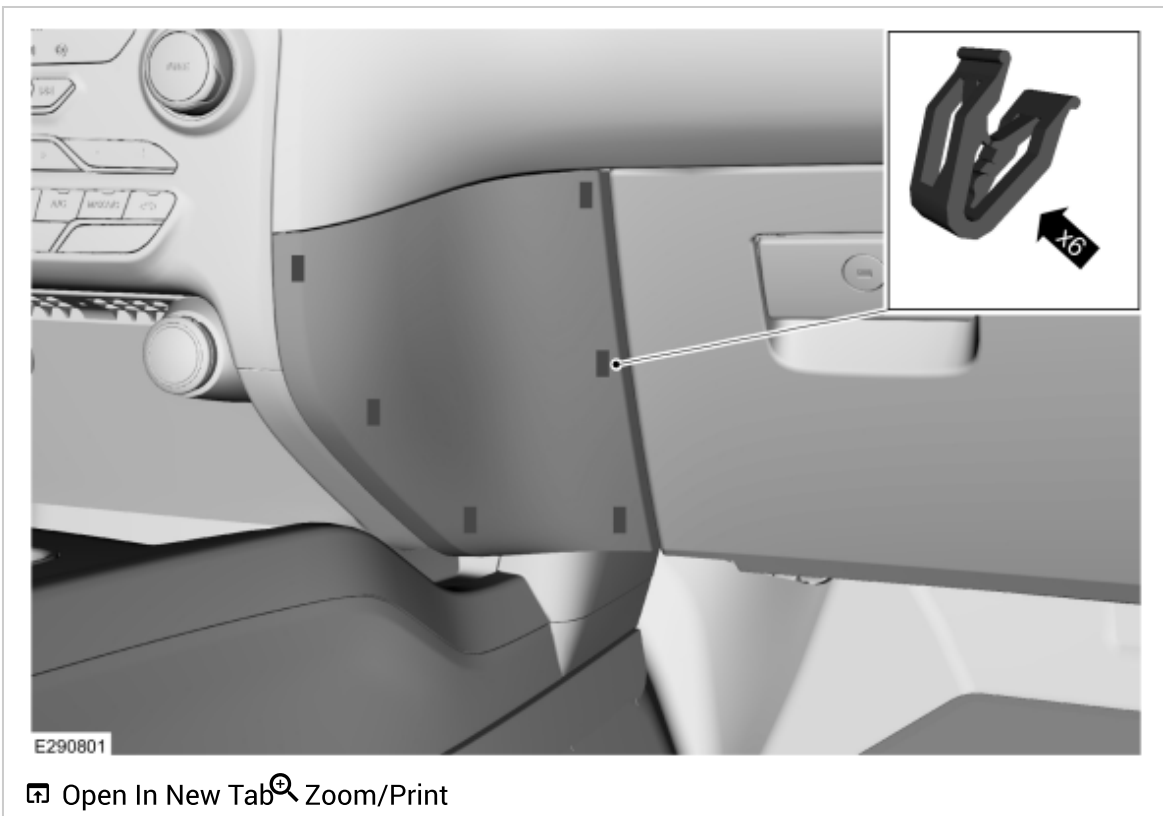

 

4. Remove the instrument panel center finish trim panel.

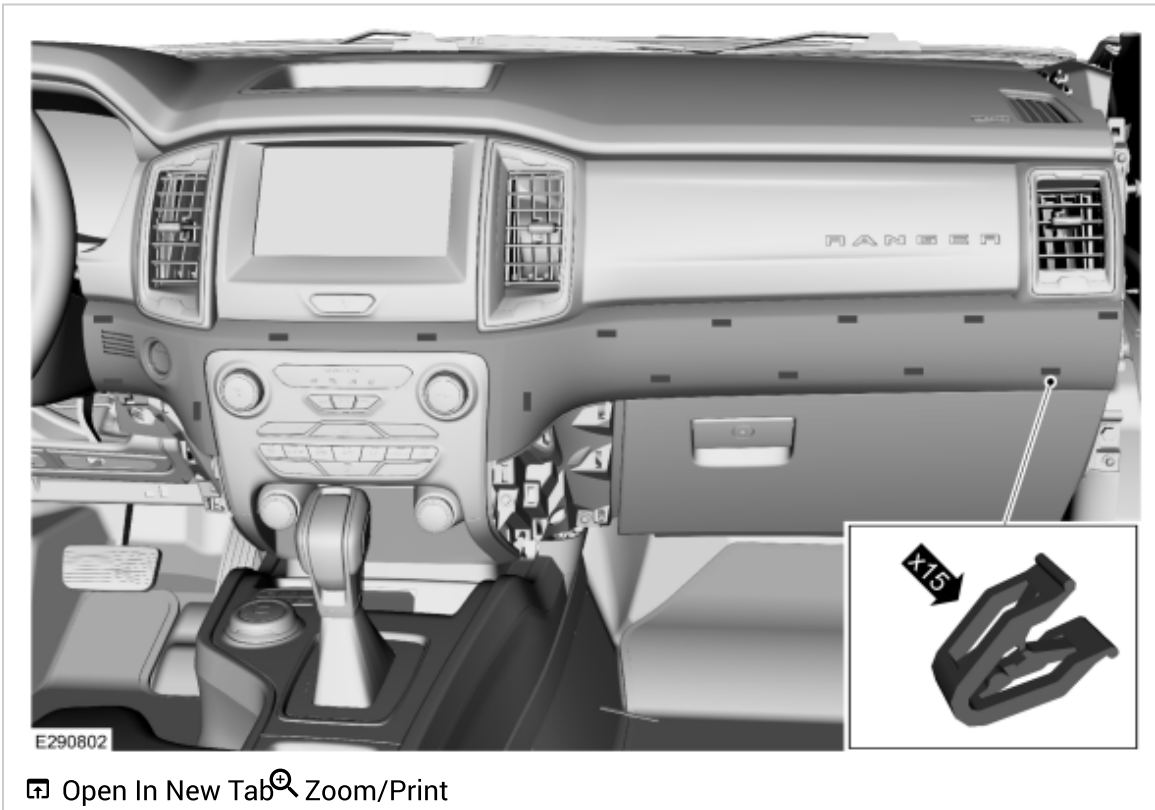

 5. Disconnect the ignition switch electrical connector.

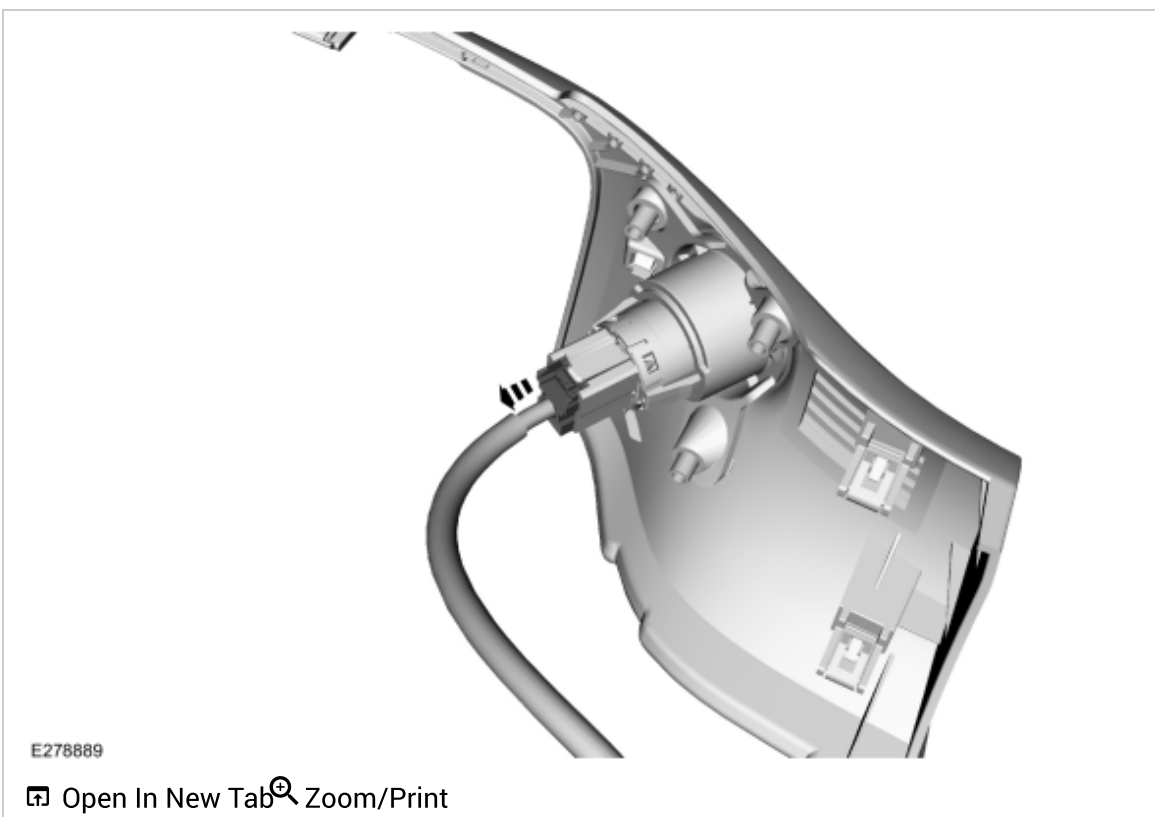

 6. Release the mounting tabs, disconnect and remove the in-vehicle temperature and humidity sensor.

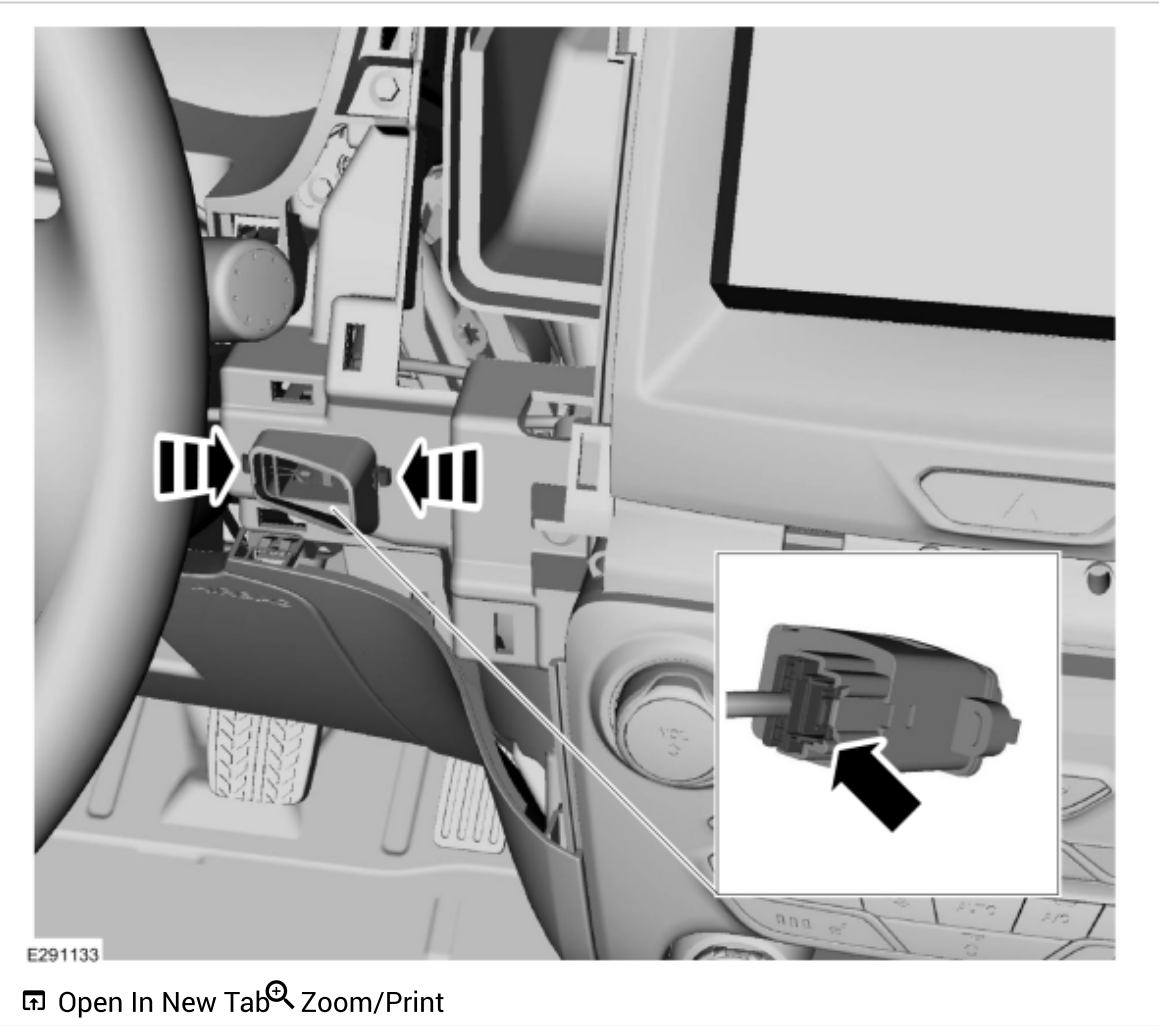

Installation

1. To install, reverse the removal procedure.