


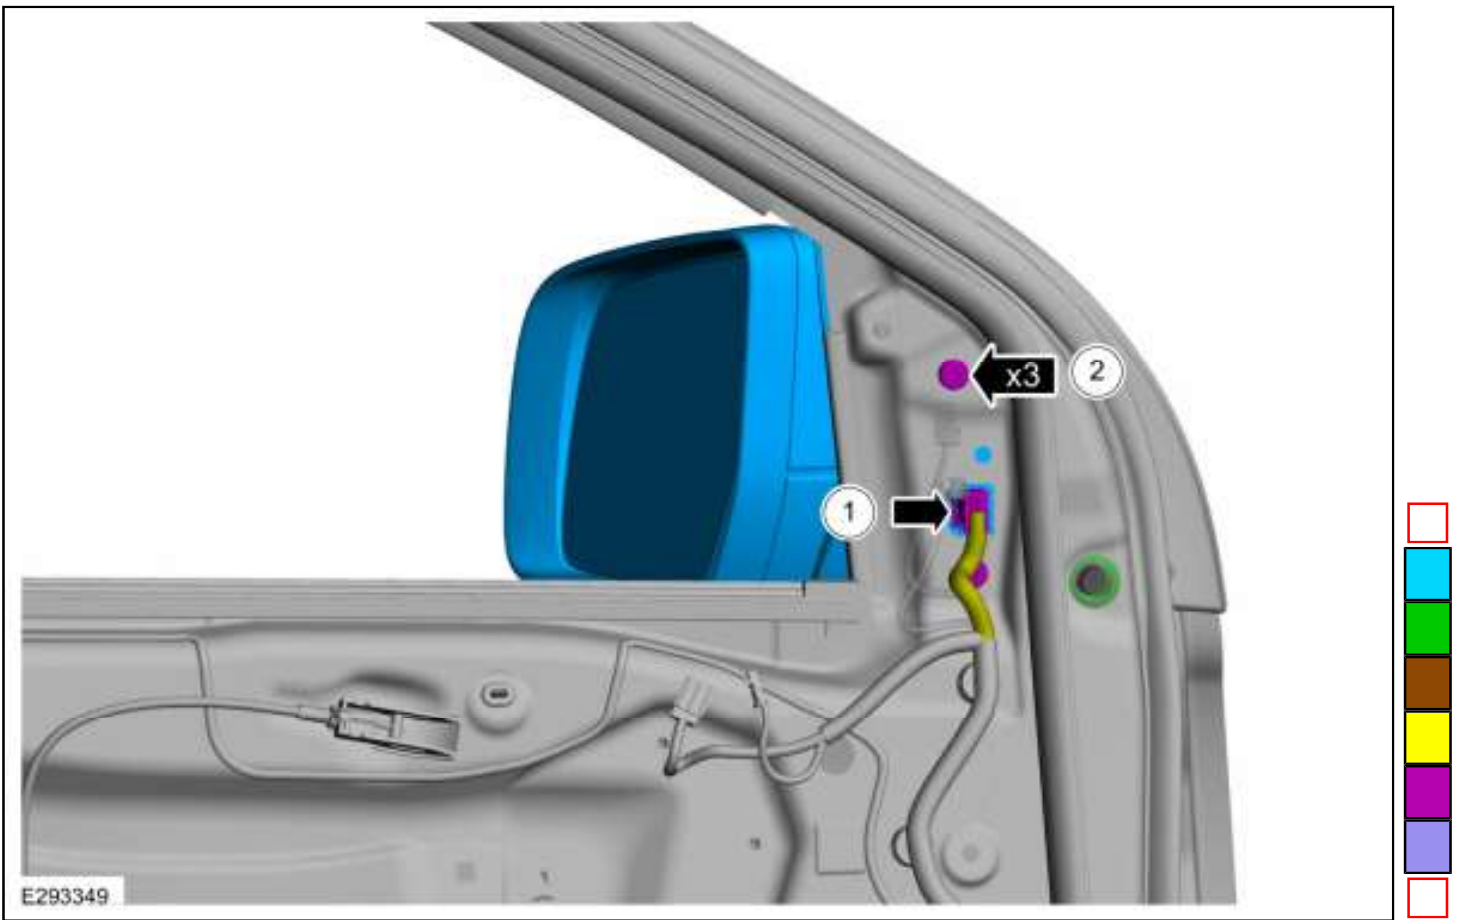


Exterior mirror glass

3. **NOTICE:** Position the screwdriver using the service slot in the mirror glass backing plate to remove the mirror glass. Prying on the backing plate in other locations may damage the mirror glass.

Remove the exterior mirror glass.

1. Position the mirror glass in and up.
2. Using a flat blade screwdriver separate the exterior mirror glass from the exterior mirror motor.
Use the General Equipment: Flat-Bladed Screwdriver
3. If equipped.
Disconnect the exterior mirror glass electrical connectors.

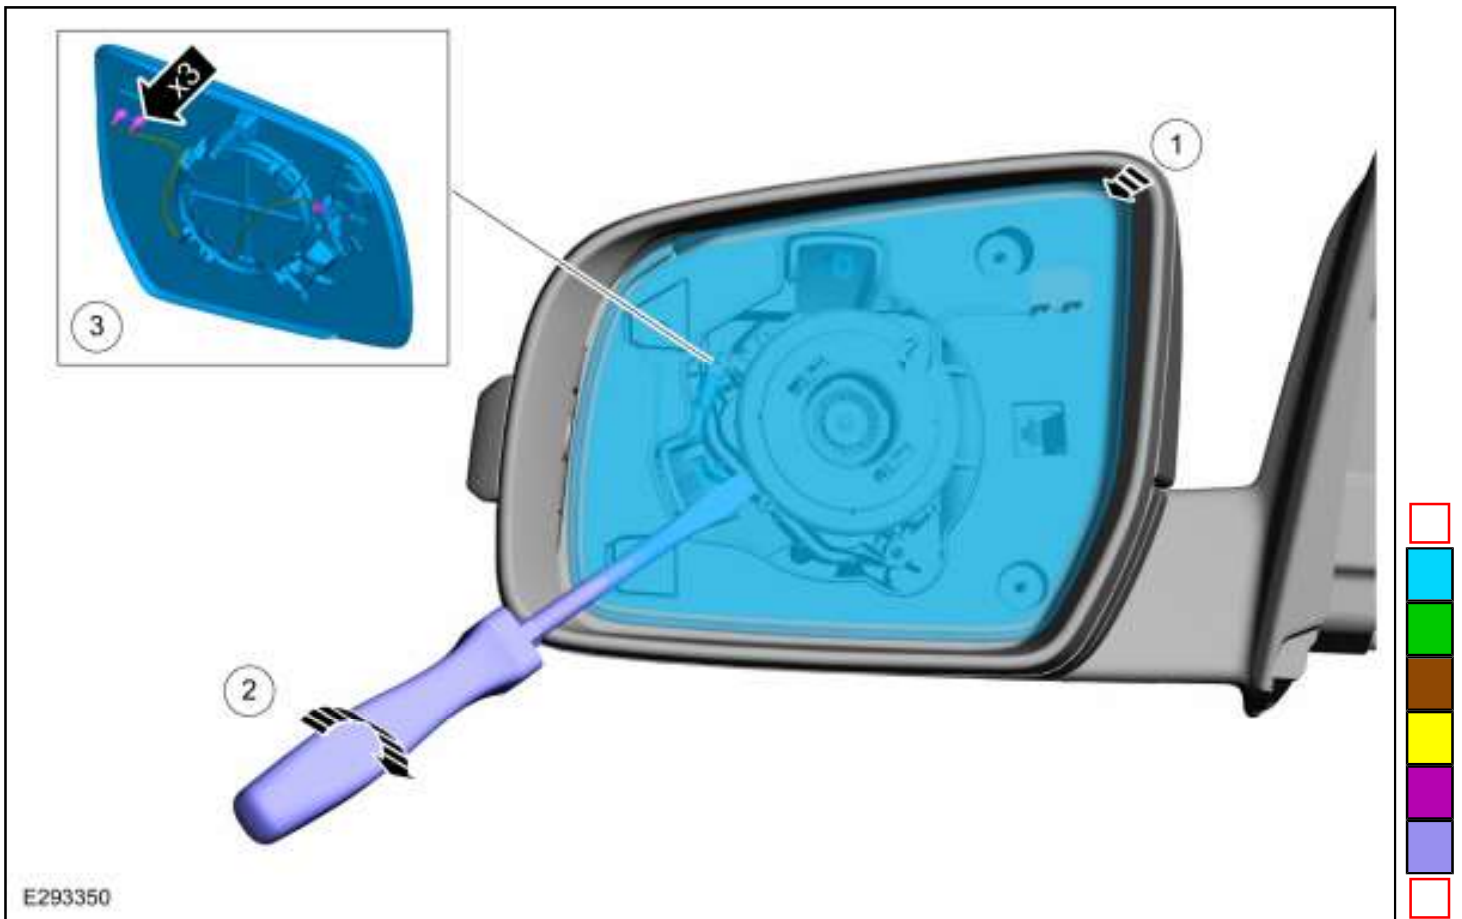


Exterior mirror motor

4. Remove the exterior mirror glass.

5.

Remove the exterior mirror motor.

1. Remove the screws and position the exterior mirror motor aside.
2. Disconnect the exterior mirror motor electrical connectors.

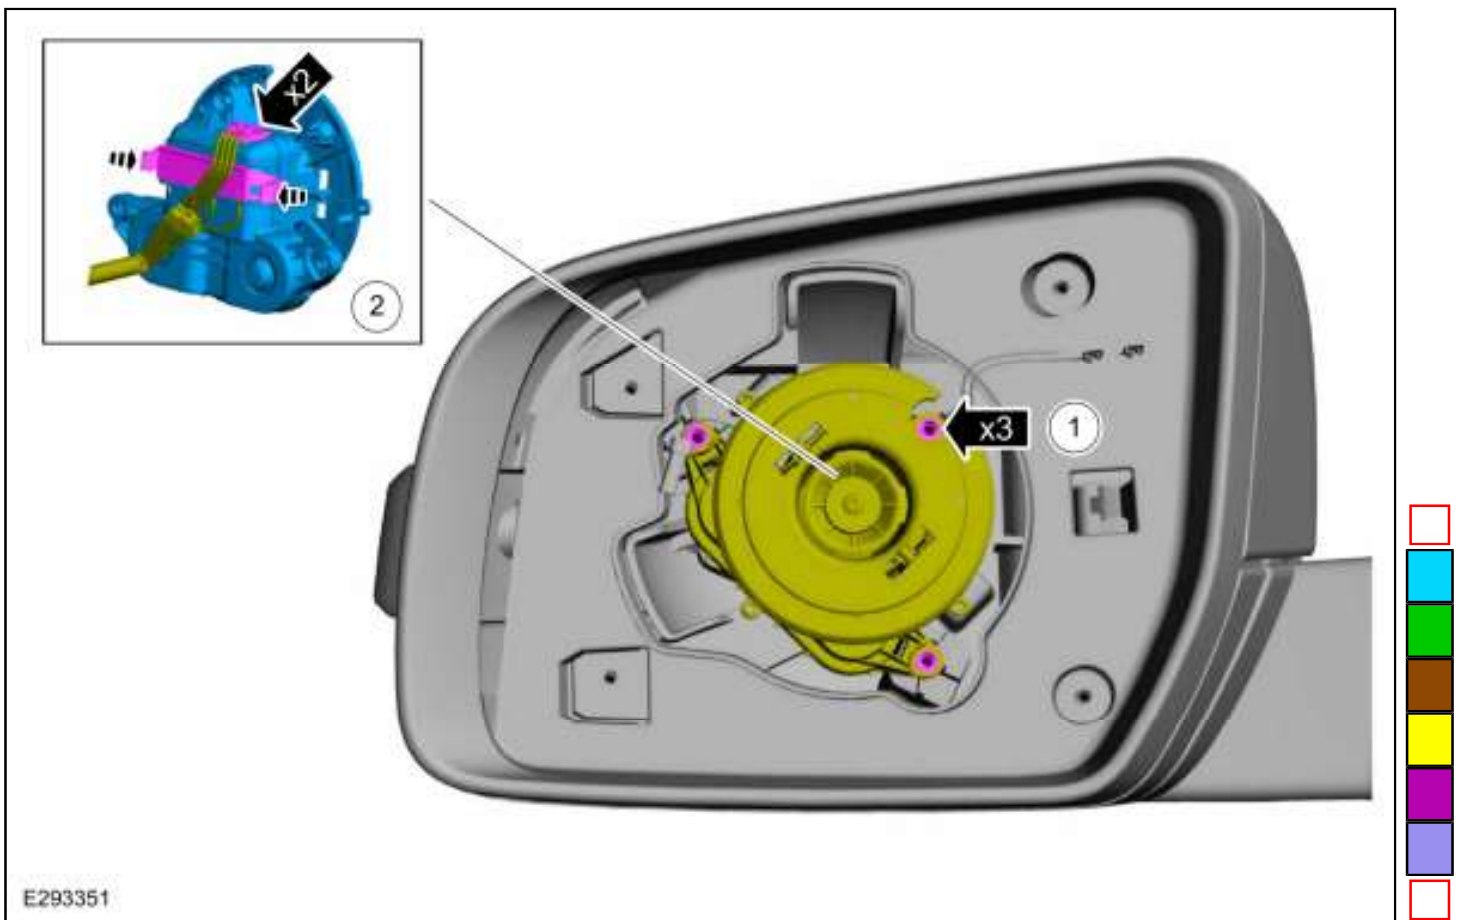

Exterior mirror bezel

6. Remove the exterior mirror glass.
7. Remove the exterior mirror bezel.
 1. Remove the exterior mirror bezel screws.
 2. Release the tab and remove the exterior mirror bezel.