

Exterior Mirror




Special Tool(s) / General Equipment

Flat-Bladed Screwdriver

Removal

Exterior mirror

1. Remove the front door trim panel.
Refer to: Front Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2.
 1. If equipped.
Disconnect the exterior mirror electrical connector.
 2. Remove the screws and the exterior mirror assembly.
Torque: 97 lb.in (11 Nm)

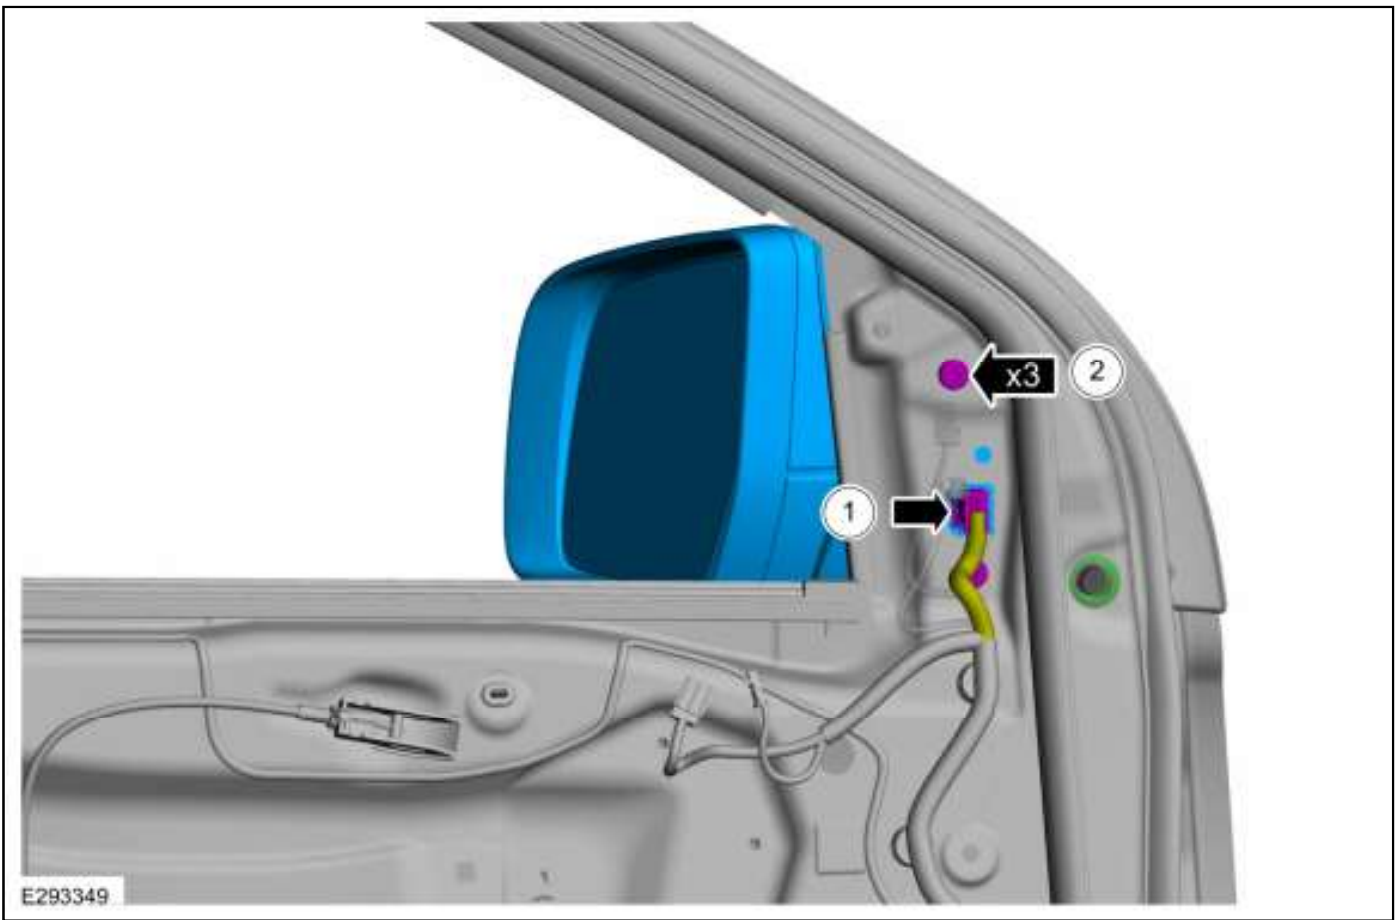

[REDACTED]

3 [REDACTED] other locations may also [REDACTED]
[REDACTED]

[REDACTED]

[REDACTED] glass in [REDACTED]

[REDACTED] or

[REDACTED] General Equipment [REDACTED]

[REDACTED] [REDACTED]