


Front Seat Power Lumbar Assembly

Removal

NOTE: Driver seat shown, passenger seat similar.


1. Remove the front seat backrest cover.
Refer to: [Front Seat Backrest Cover](#) (501-10A Front Seats, Removal and Installation).
2. Disconnect the front seat power lumbar assembly electrical connector.

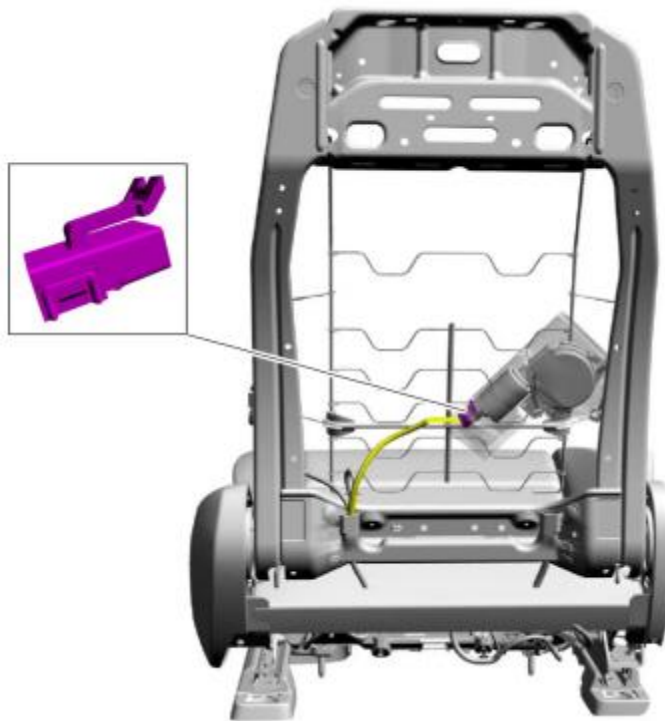

E293344



3. Remove the front seat power lumbar assembly.
 1. Detach the lower J-hook retainers.
 2. Detach the middle J-hook retainers.
 3. Detach the upper J-hook retainers.

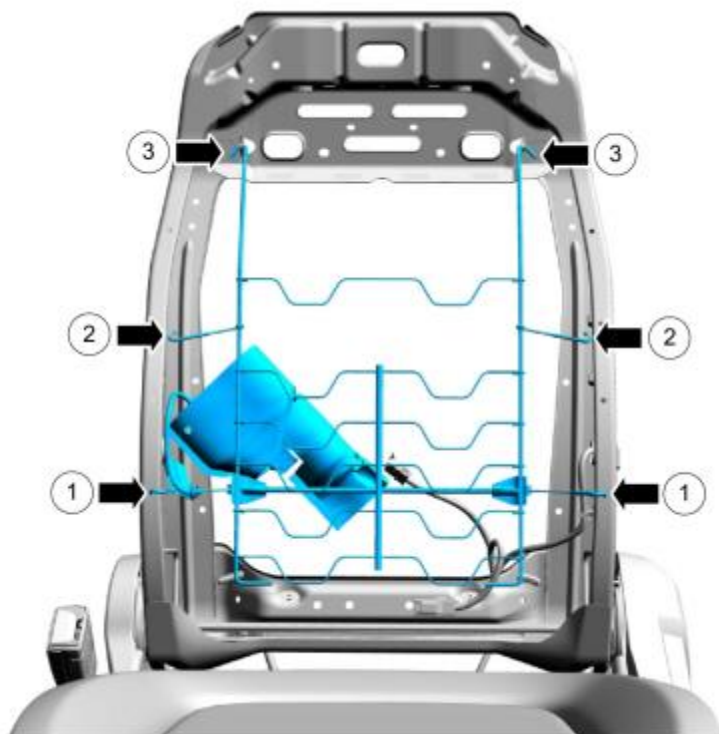

E293345



Installation

1. To install, reverse the removal procedure.