

SEATBELT MINDER DEACTIVATING/ACTIVATING (WITH SEATBELT MINDER DEACTIVATED)

413-01 Instrumentation, Message Center and Warning
Chimes
General Procedures

2020 Ranger

Seatbelt Minder Deactivating/Activating

Activation

NOTE: *If the Seatbelt Minder is deactivated, follow this procedure to activate.*

NOTE: *Deactivation/activation of the belt minder may also be carried out using IDS. Follow the instructions on the screen.*

NOTE: *The belt minder can be enabled or disabled independently for the driver and the front passenger by performing the following procedure.*

1. Apply the parking brake.
 2. Place the transmission selector lever in P (Park) - vehicles with automatic transmission or the neutral position - vehicles with manual transmission.
 3. Turn the ignition switch to the OFF position.
 4. Close all the vehicle doors from the inside of the vehicle.
 5. **Unbuckle** the driver's safety belt.
 6. **Unbuckle** the front passenger's safety belt.
 7. Turn the ignition switch to the ON position (do not start the engine).
 8. **Wait until the safety belt warning indicator turns off.**
 9. **NOTE:** *This step must be completed within 30 seconds or the procedure must be repeated.*

Buckle then unbuckle the safety belt four times, ending with the safety belt unbuckled. Release the red unbuckle switch **completely** every cycle.
 10. The safety belt warning indicator flashes momentarily to confirm the belt minder status change.
 11. Turn the ignition switch to the OFF position. The deactivation/activation procedure is now complete.
-

