

## SEATBELT MINDER DEACTIVATING/ACTIVATING

# Seatbelt Minder Deactivating/Activating

### Preparation

1. Apply the parking brake.
2. Place the transmission selector lever in P (Park) - vehicles with automatic transmission or the neutral position - vehicles with manual transmission.
3. Turn the ignition switch to the OFF position.
4. Close all the vehicle doors from the inside of the vehicle.

### Deactivating/Activating

**NOTE:** Deactivation of the belt minder may also be carried out using IDS. Follow the instructions on the screen.

**NOTE:** The belt minder can be turned off independently for the driver and the front passenger by performing the following procedure.

1. **Unbuckle** the driver's safety belt.
2. **Unbuckle** the front passenger's safety belt.
3. Turn the ignition switch to the ON position (do not start the engine).
4. **Wait until the safety belt warning indicator turns off.**
5. **NOTE:** *This step must be completed within 30 seconds or the procedure must be repeated.*

Buckle then unbuckle the safety belt four times, ending with the safety belt unbuckled. Release the red unbuckle switch **completely** every cycle.

6. The safety belt warning indicator flashes momentarily to confirm the belt minder status change.
  7. Turn the ignition switch to the OFF position. The deactivation/activation procedure is now complete.
-