

UVP FITTED IN CONJUNCTION WITH ARB BULL BAR


- Loosely fasten ARB front panel to vehicle as shown using fasteners supplied in kit as well as 2x fasteners removed previously in step 1.

**Note:** When vehicle is equipped with bull bar, use 3xM8 fasteners (supplied with bull bar) to fix front edge of panel as shown.

REFER "FIT FRONT PANEL" SECTION OF TABLE ON PAGE 3.

*Factory Bolts Here*

*Washer Spacer Goes Here*

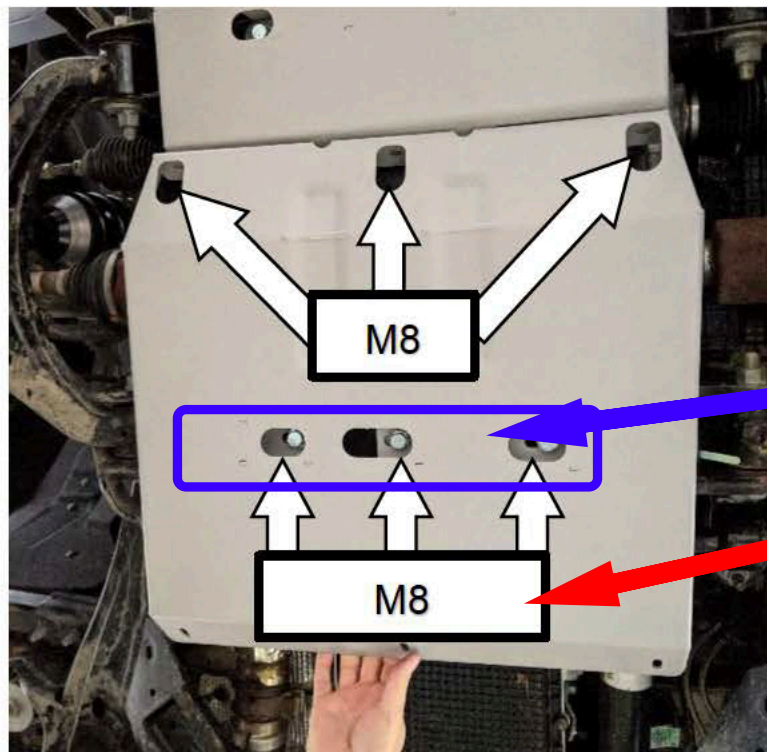

- Loosely fasten ARB diff panel to vehicle and Front Panel as shown using fasteners supplied in kit.

REFER "FIT DIFF PANEL" SECTION OF TABLE ON PAGE 3.

*Two Spacers Go Under here*

*These are M10 not M8 Bolts*

- Loosely fasten ARB transmission/transfer-case panel to vehicle and Diff Panel as