


# FOR INSTALLATION ON DRIVER'S SIDE ONLY

DZ 43206

FORD RANGER TAILGATE ASSIST  
2019- CURRENT

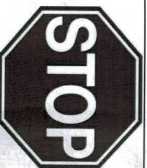

**Before returning this product to the store of purchase contact Dee Zee if you experience the following problems:**


- Missing Parts
- Installation Problems/Questions
- Warranty Questions

**1.800.779.2102**

Hours of operation: 9am - 5pm CST, Mon-Friday

Dee Zee Company  
www.deezee.com

## BALL MOUNT PLATE

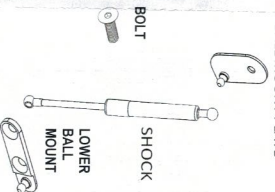

### PARTS LIST:

| ITEM             | QTY |
|------------------|-----|
| SHOCK            | 1   |
| BALL MOUNT PLATE | 1   |
| LOWER BALL MOUNT | 1   |
| BOLT             | 2   |


### TOOLS REQUIRED:

T-50 TORX  
M6 ALLEN WRENCH  
FLATHEAD SCREWDRIVER

**NOTE: THIS PRODUCT CAN ONLY BE INSTALLED ON THE DRIVER'S SIDE.**

### STEP 1)

Remove the rear bolt using the T-50 Torx wrench. **Do not remove the front bolt.**

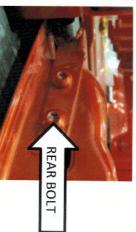

### STEP 2)

Install the lower part of the shock onto the lower ball mount.



### STEP 3)

Install supplied flathead bolt through the hole in the bracket as shown. Then thread the bolt into the rear bolt location from Step 1. **Do not fully tighten.**



### STEP 4)

Remove the front bolt and install supplied flathead bolt through the bracket and into the hole. **Fully tighten both bolts using an M6 allen wrench at this time.**



## FOR INSTALLATION ON DRIVER'S SIDE ONLY

### STEP 5)

Using a flathead screwdriver, pry the spring clip out and remove the tailgate cable from the bolt. Use a T50 torx socket to remove the cable bolt



### STEP 6)

Install the bolt removed from the previous step through the hole in the ball mount plate back into the hole.



Tighten the bolt with the T50.

### STEP 7)

Install the cable back onto the cable bolt.



### STEP 8)

Install the larger part of the shock on the ball mount plate.

