
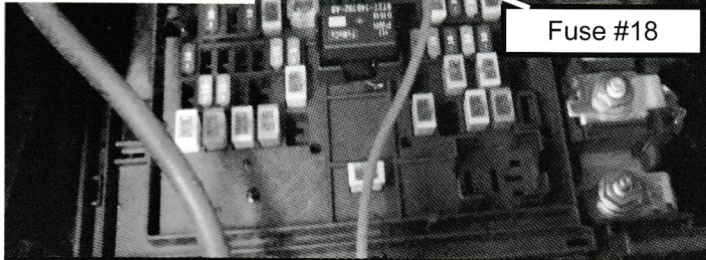



18. Connect the Add-A-Fuse tap to the LED emblem and route the wire to the fuse box. Be careful to avoid sharp edges and moving parts. Zip-tie wire in place when installation is complete.

Fuses properly installed

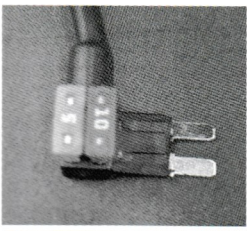

19. Remove Fuse #18 (10A fuse). Insert it in Add-A-Fuse tap and install provided 5A fuse on wire side of Add-A-Fuse tap, as pictured. Install assembly in Fuse #18 slot.

NOTE: For 2015-2017 trucks, install assembly in Fuse #105 slot.

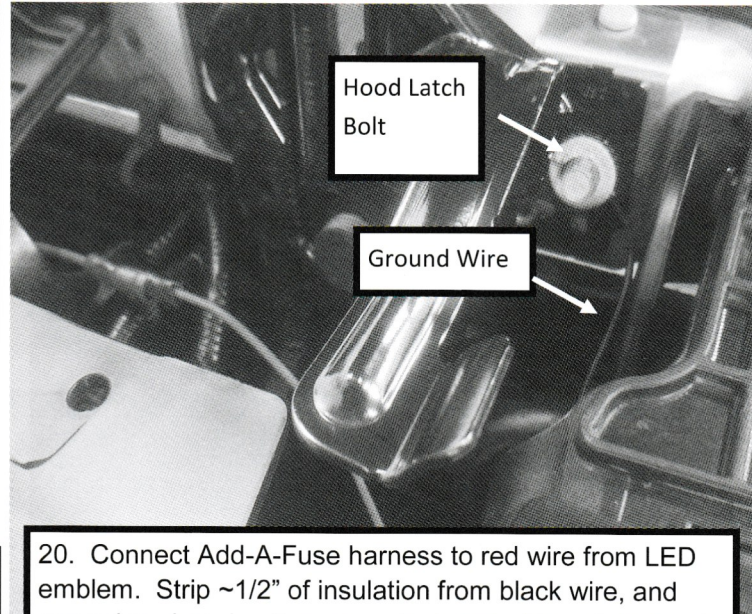

20. Connect Add-A-Fuse harness to red wire from LED emblem. Strip ~1/2" of insulation from black wire, and ground to chassis. For example, loosen (do not remove) the 10mm bolt holding hood latch enough to wrap black ground wire around bolt. Tighten bolt, making sure wire is secured.

21. Test the emblem (key on or vehicle running). Make sure to zip-tie the wires safely in place before final reassembly!

