

FOR INSTALLATION ON DRIVER'S SIDE ONLY



Before returning this product to the store of purchase

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:
www.deeze.com

DZ 43206
FORD RANGER TAILGATE ASSIST
2019- CURRENT



BALL MOUNT PLATE



BOLT



SHOCK



LOWER BALL MOUNT



PARTS LIST:

ITEM	QTY
SHOCK	1
BALL MOUNT PLATE	1
LOWER BALL MOUNT	1
BOLT	2



TOOLS REQUIRED:

- T-50 TORX
- M6 ALLEN WRENCH
- FLATHEAD SCREWDRIVER

NOTE: THIS PRODUCT CAN ONLY BE INSTALLED ON THE DRIVER'S SIDE.

STEP 1)

Remove the rear bolt using the T-50 Torx wrench. **Do not remove the front bolt.**

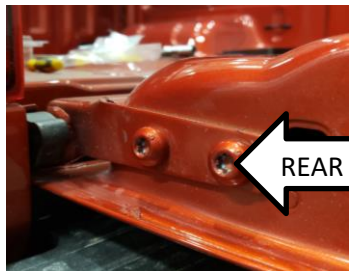

STEP 2)

Install the lower part of the shock onto the lower ball mount.



STEP 3)

Install supplied flathead bolt through the hole in the bracket as shown. Then thread the bolt into the rear bolt location from Step 1. **Do not fully tighten.**



STEP 4)

Remove the front bolt and install supplied flathead bolt through the bracket and into the hole. **Fully tighten both bolts using an M6 allen wrench at this time.**



FOR INSTALLATION ON DRIVER'S SIDE ONLY

STEP 5)

Using a flathead screwdriver, pry the spring clip out and remove the tailgate cable from the bolt. Use a T50 torx socket to remove the cable bolt



STEP 6)

Install the bolt removed from the previous step through the hole in the ball mount plate back into the hole.



Tighten the bolt with the T50.

STEP 7)

Install the cable back onto the cable bolt.



STEP 8)

Install the larger part of the shock on the ball mount plate.

