

← C1035A ▾ →




**Connector: C1035A**

**Description:**  
BATTERY JUNCTION BOX (BJB)

**Harness:**  
14290

**Base Part #:**  
part# N/A

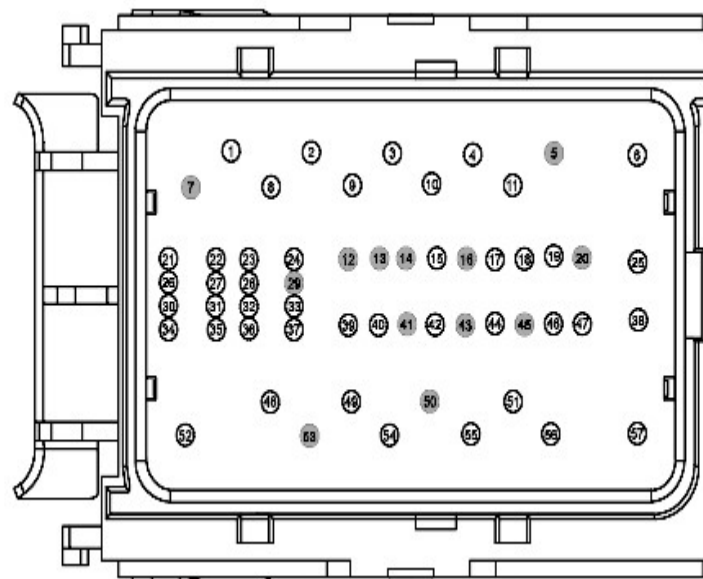

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	CRW03 (VT-WH)	12	RELAY - FRONT WIPER	
2	GD191 (BK-GN)	12	GROUND - FENDER FRONT LEFT # 4TH POINT	
3	CH402 (YE-GN)	10	RELAY - FRONT BLOWER	
4	CRD06 (BN-YE)	12	RELAY - HEATER REAR WINDOW	
5	*	*	not used	
6	SBB67 (BU-RD)	8	FUSE - 67 OR CIRCUIT BREAKER	
7	*	*	not used	
8	CDC25 (BN-GN)	12	RELAY - STARTER	
9	SBB10 (YE-RD)	14	FUSE - 10 OR CIRCUIT BREAKER	
10	CBB07 (GN-BU)	14	FUSE - 7 OR CIRCUIT BREAKER	
11	CBK02 (GN)	14	FUSE - 8 OR CIRCUIT BREAKER (VPWR 2)	
12	*	*	not used	
13	*	*	not used	
14	*	*	not used	
15	CBB47 (GN-BU)	20	FUSE - 47 OR CIRCUIT BREAKER	

16	*	*	not used
17	CBK04 (VT-RD)	18	FUSE - 11 OR CIRCUIT BREAKER (VPWR 4)
18	CBK03 (GY)	18	FUSE - 12 OR CIRCUIT BREAKER (VPWR 3)
19	CBB19 (BN-WH)	20	FUSE - 19 OR CIRCUIT BREAKER
20	*	*	not used
21	CDC71 (YE-GY)	20	CTRL MOD. - POWER OUTLET ENABLE OR SET
22	CDC54 (WH-GN)	20	CTRL MOD. - POWERTRAIN # STARTER MOTOR CONTROL SENSE (SMCS)
23	CDC55 (GY)	20	RELAY - RUN; START
24	CH302 (WH-BN)	20	CTRL MOD. - POWERTRAIN # A/C CLUTCH CONTROL RELAY / WOT AC CUTOFF (ACCR)
25	CE608 (VT-GN)	10	RELAY - FUEL PUMP
26	CH123 (VT-GN)	20	CTRL MOD. - BLOWER MOTOR RELAY
27	CDC12 (YE)	20	CTRL MOD. - POWERTRAIN # STARTER MOTOR CONTROL (SMC)
28	CE302 (YE-BU)	20	CTRL MOD. - POWERTRAIN # POWERTRAIN CONTROL RELAY (PCMRC)
29	*	*	not used
30	CDC72 (BN-WH)	20	CTRL MOD. - POWER OUTLET DISABLE OR RESET
31	CAT06 (YE)	20	CTRL MOD. - TRAILER TOW # TURN SIGNAL LEFT
32	CRD02 (BN-BU)	20	CTRL MOD. - RELAY HEATER REAR WINDOW
33	CLS59 (BN-BU)	20	RELAY - REVERSE LAMP
34	CDC40 (VT-GY)	20	RELAY - DELAY ACCESSORY
35	CE226 (YE-VT)	20	CTRL MOD. - POWERTRAIN # FUEL PUMP ON/OFF (FP) +
36	CRH02 (BU-WH)	20	SWITCH - HORN
37	CAT09 (GN)	20	CTRL MOD. - TRAILER TOW # TURN SIGNAL RIGHT
38	CAT29 (GN)	14	CTRL MOD. - TRAILER TOW # STOP/TURN LAMP RIGHT
39	CBB21 (BU-GY)	16	FUSE - 21 OR CIRCUIT BREAKER
40	CRD17 (GY)	20	RELAY - HEATER MIRROR
41	*	*	not used
42	CBB20 (YE-VT)	20	FUSE - 20 OR CIRCUIT BREAKER
43	*	*	not used
44	CH401 (VT-WH)	18	RELAY - A/C CLUTCH
45	*	*	not used
46	CRH01 (YE-RD)	14	RELAY - HORN
47	CBB25 (WH-OG)	20	FUSE - 25 OR CIRCUIT BREAKER
48	SBB05 (GY-RD)	14	FUSE - 5 OR CIRCUIT BREAKER
49	SBB16 (VT-RD)	14	FUSE - 16 OR CIRCUIT BREAKER
50	*	*	not used
51	CAT28 (YE)	14	CTRL MOD. - TRAILER TOW # STOP/TURN LAMP LEFT
52	SBB82 (YE-RD)	8	FUSE - 82 OR CIRCUIT BREAKER
53	*	*	not used
54	CBX01 (GN-RD)	12	POWER - SEAT # RUN/START
55	CBX02 (BN-RD)	12	POWER - SEAT # RUN/START
56	SBB69 (GY-RD)	12	FUSE - 69 OR CIRCUIT BREAKER
57	SBB62 (BN-RD)	8	FUSE - 62 OR CIRCUIT BREAKER