

TRANSFER CASE DRAINING AND FILLING (10R80 - AUTOMATIC TRANSMISSION)

308-07B Transfer Case - 10-Speed Automatic Transmission - 10R80

2019 Ranger

General Procedures

Transfer Case Draining and Filling


1.

For additional information, refer to: Jacking and Lifting (100-02 Jacking and Lifting, Description and Operation) .

NOTICE: Do not use an impact wrench when removing the filler plug or drain plug. It may damage the transfer case case.

Remove the drain plug and the seal.

- Drain the oil into a suitable container.
- Tighten the drain plug with a new seal.
- Tightening torque 19-30 Nm.

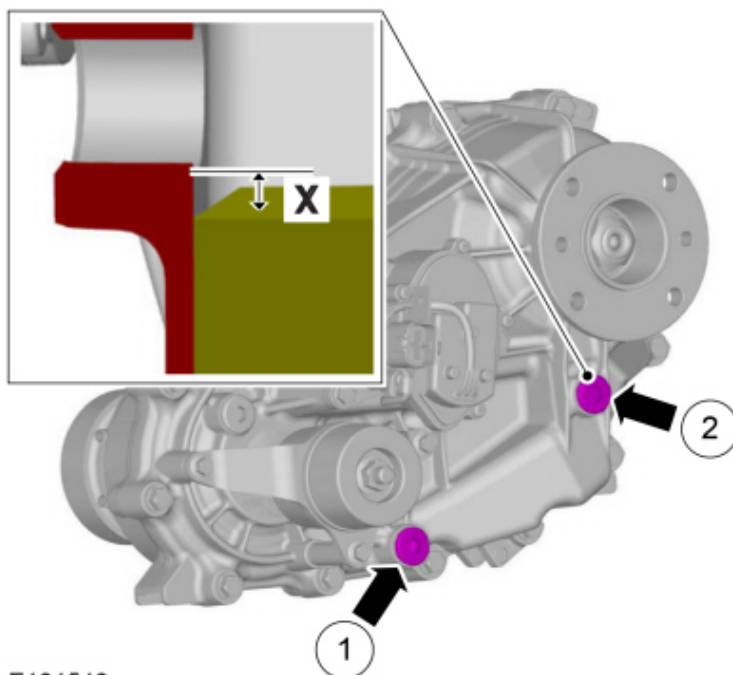

E131513

2. **NOTICE: Only use the specified lubricant.**

Remove the filler plug and seal and add the specified amount and type of oil through the filler plug hole until the level reaches the bottom of the filler plug hole.

- Transfer oil type: Motorcraft MERCON® LV WSS-M2C938-A XT-10 QLVC. Capacity (approximate quantity): 1.2 L {1.3 US qt, 1.1 Imp qt}.

For additional information, refer to: Specifications (308-07B Transfer Case - 10-Speed Automatic

Transmission - 10R80, Specifications) .

- Tighten the filler plug with a new seal.
 - Tightening torque 19-30 Nm.
-