


- US**
INSTALLATION INSTRUCTIONS - BED EXTENDER
- E**
INSTRUCCIONES DE INSTALACIÓN -EXTENSOR DE LA CAJA DE CARGA
- F**
INSTRUCTIONS D'INSTALLATION - RALLONGE DE CAISSE



Accessorize your vehicle at: FORDACCESSORIES.COM
 Accesorios a tu vehículo: FORDACCESSORIES.COM
 Personnalisez votre véhicule sur le site: FORDACCESSORIES.COM

RANGER
2019

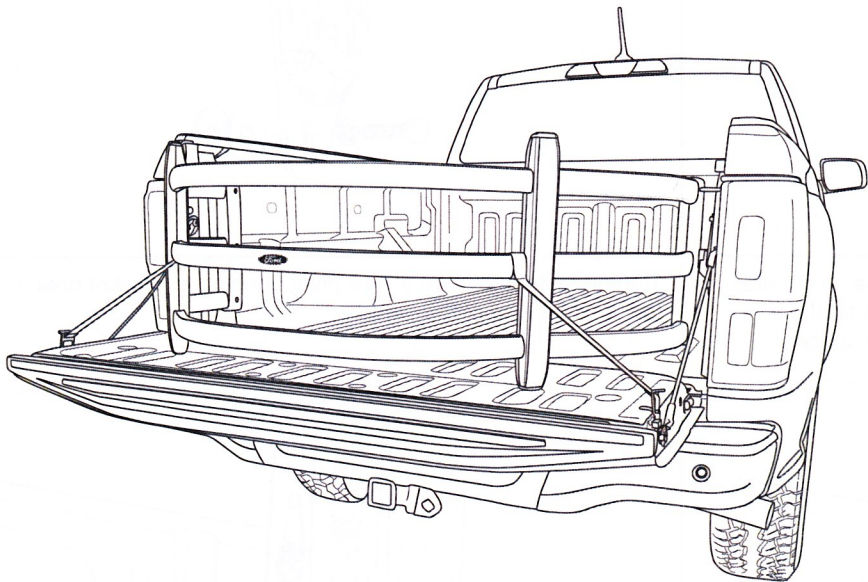

PERSONAL INJURY
 LESIONES PERSONALES
 RISQUE DE BLESSURE



VEHICLE DAMAGE
 DAÑOS AL VEHICULO
 DOMMAGE AU VEHICULE



INCORRECT
 INCORRECTO
 INCORRECT









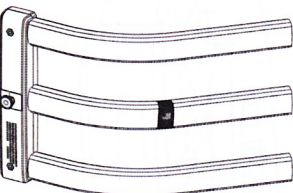
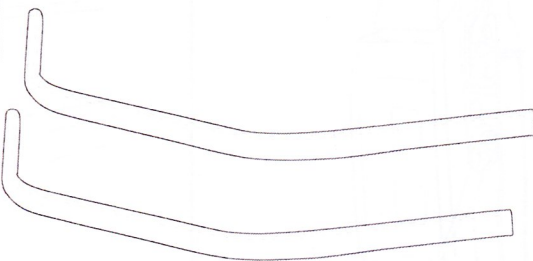





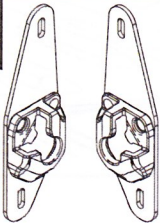

CORRECT
 CORRECTO
 CORRECT



SEE MANUAL
 VER MANUAL
 VOIR LE MANUAL

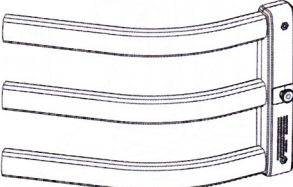
Components - Componentes - Composants

A		B	 X4	C	 X4	D	 X8	E	 X12	F	 X2	G	 X4	H	 X4
I				J				K	 X2	L	 X2				
M				N				O	 X2						




MOUNTING BRACKET INSTALLATION


Driver side, Bracket and hardware orientation

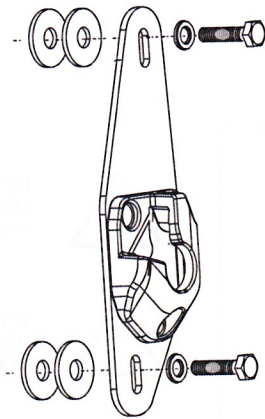

Passenger side, Bracket and hardware orientation

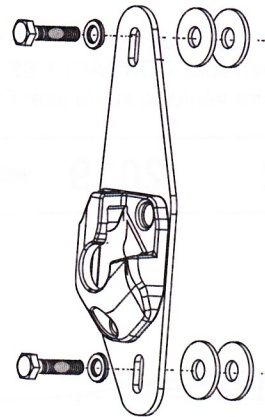


Install Pivot Brackets to upper two threaded holes on D-Pillar. Each bolt location will take two plastic spacers (4 total per bracket, as shown) under the bracket to properly space brackets.

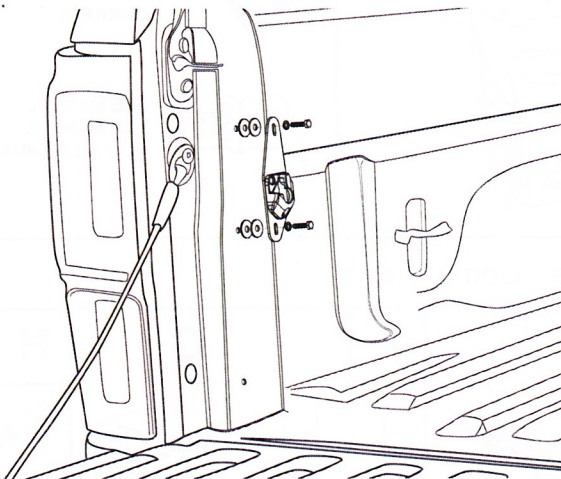


1

Tighten fasteners. Make sure pivot opening in bracket opens towards the rear of the vehicle.

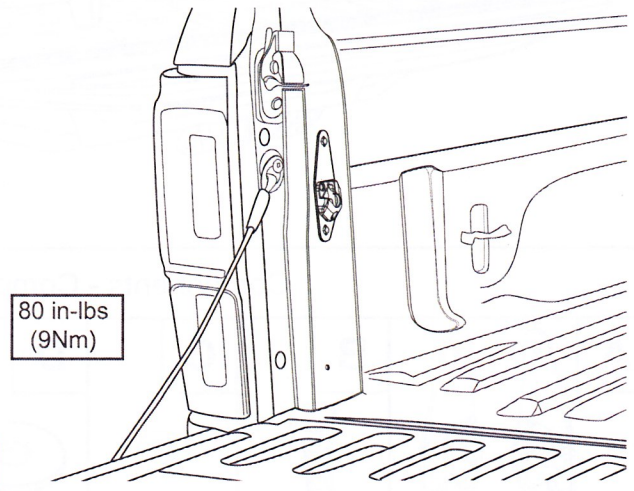


2

Repeat step 1 on passenger side.

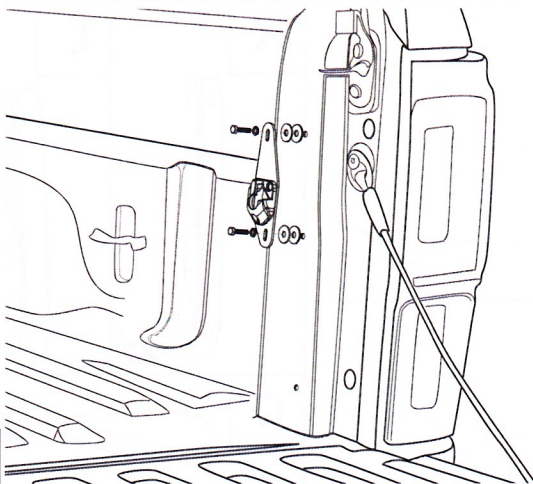


3

Repeat step 2 on passenger side.

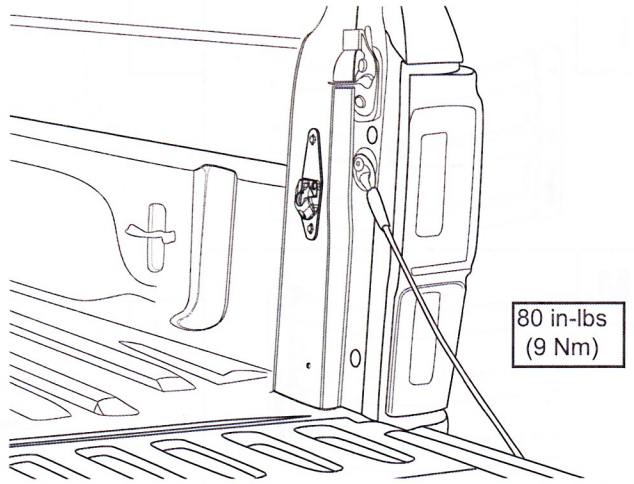


4

Note the unpainted section of the tubes. This will be used as a guide to assemble the tubes together.

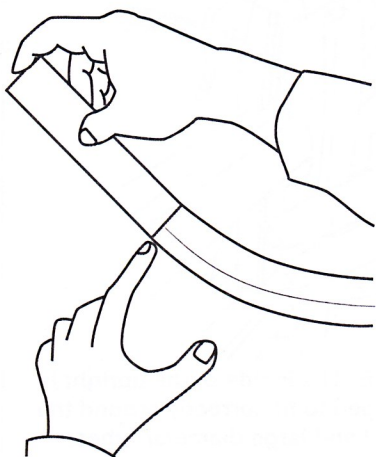


5

Slide the center tube into the center tube of the 3-tube assembly. Straps will be pre-assembled to center tube. Insert tube until edge of unpainted section meets mating tube.

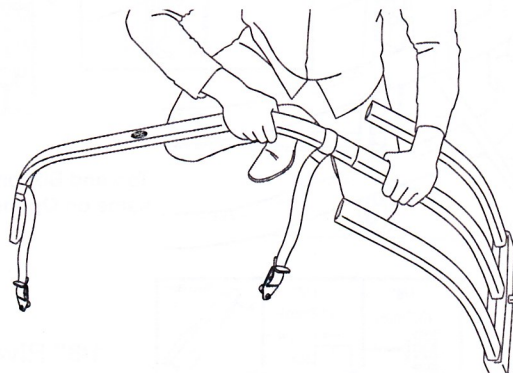

6


Insert the top long tube into the top tube of the 3-tube assembly.

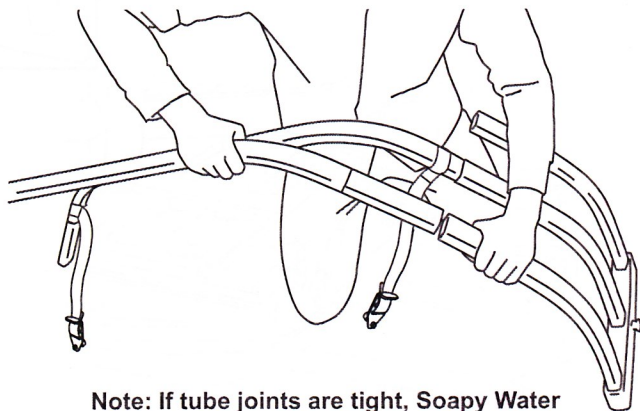

Note: If tube joints are tight, Soapy Water can be used.


7

Insert the bottom long tube into the bottom tube of the 3-tube assembly.

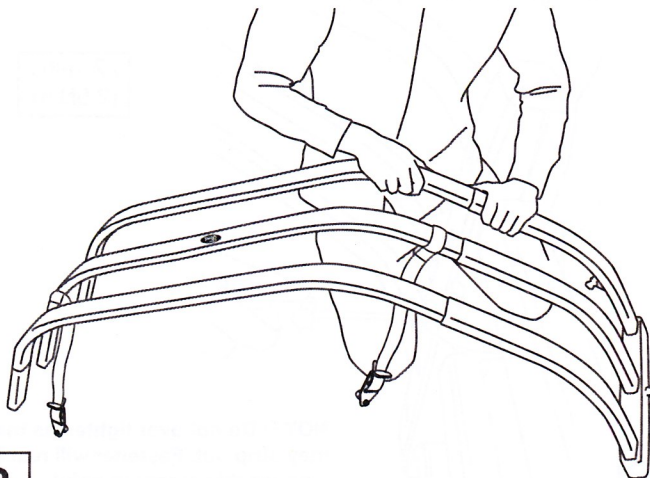

8


Repeat for the other side. Tubes will need to be slide in evenly to prevent binding.

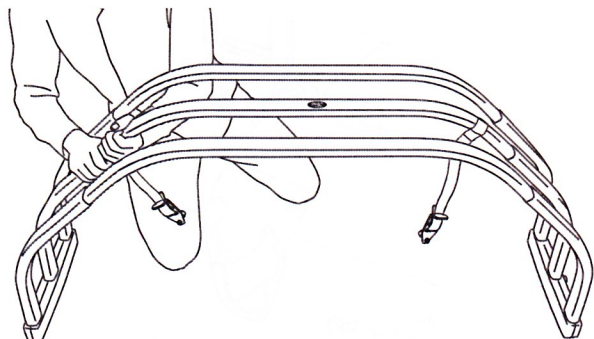


Note: Make sure straps are already installed on center tube before completing assembly.

9

Insert/attach the Bed Extender to the mounted Pivot Brackets, adjusting width if necessary. Leave the Bed Extender attached to the brackets for the following steps, while attaching the two bumper uprights.

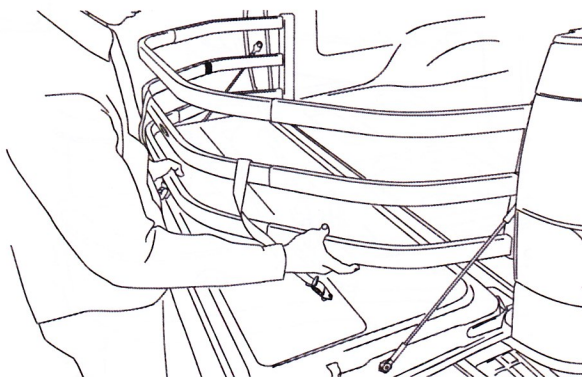


10

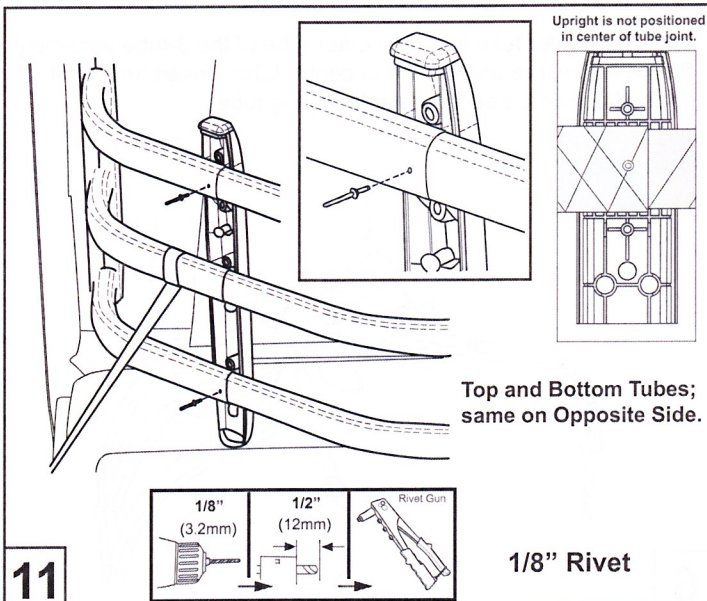


11

Attach plastic upright around the tube juncture, placing rubber bumpers into the two ends of the upright.

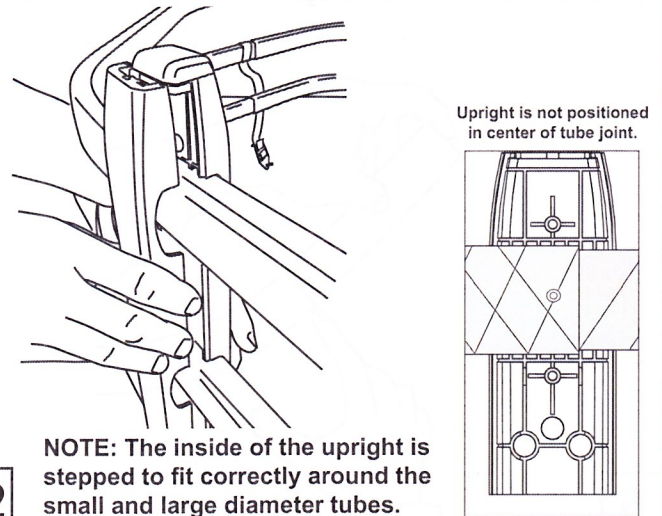


12

Tighten PT-Screws using a T-25 torx driver, starting in the middle of each upright, then the outer screws and lastly the remaining two to evenly tighten.

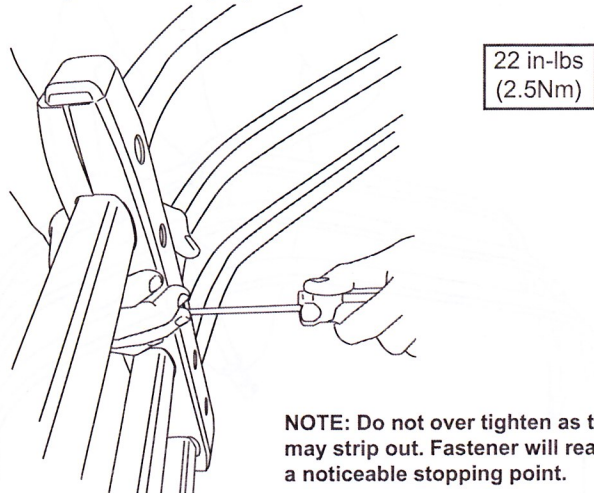


13

Apply anti-scratch tape around tailgate latch opening.

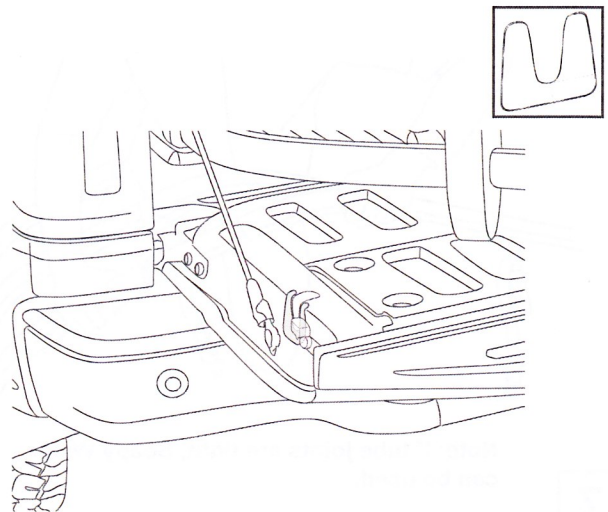


14

Apply anti-scratch tape on other side.

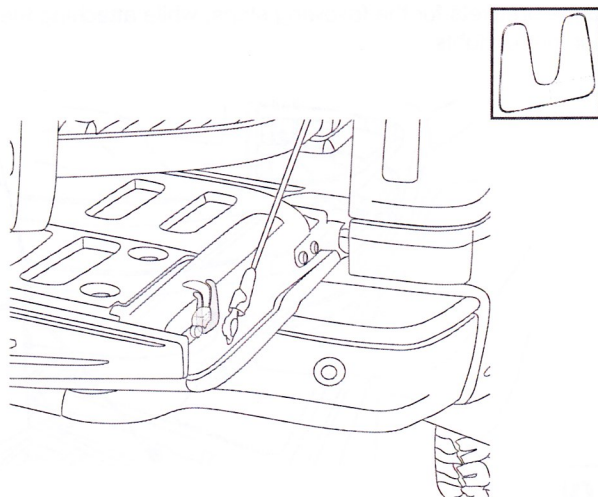

15

Adjust Strap Buckles to lock into the tailgate when Bed Extender is deployed.

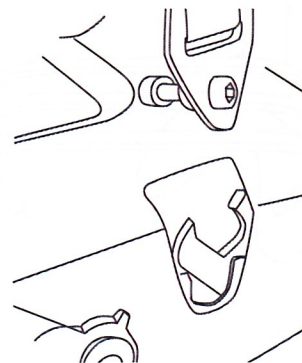


16

NOTE: Ensure that buckles are properly inserted into latches by pulling on the straps after both buckles have been inserted.

Cargo Divider Position: Flip the Bed Extender inboard to act as a cargo divider for your truck bed. The buckles/straps can be tied around the bumper uprights to secure them from swinging.

NOTE: Pull tailgate release handle to release buckles from the tailgate, before flipping the Bed Extender into the cargo divider position.

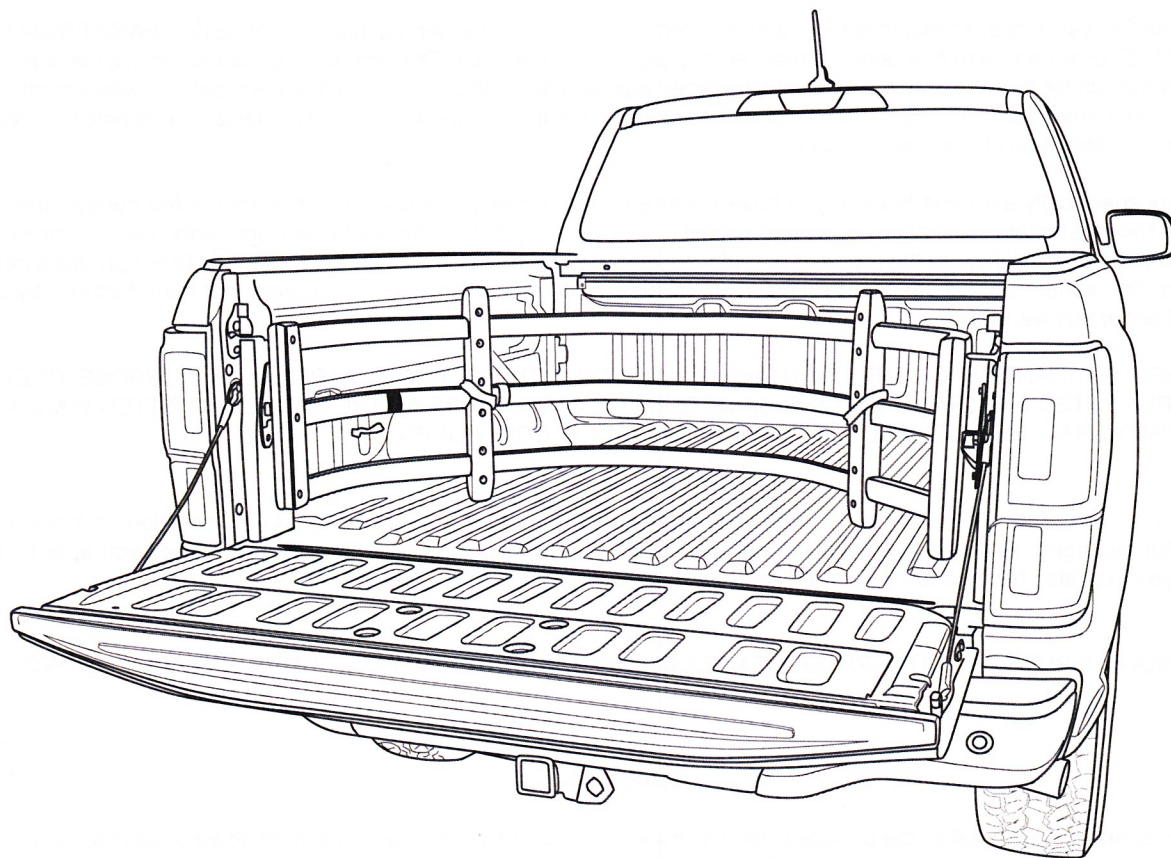



AMP Research LIMITED WARRANTY

AMP RESEARCH warrants this product to be free from defects in material and workmanship for THREE (3) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL AMP RESEARCH CUSTOMER SERVICE 1-888-983-2204

WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.

Do not exceed the rated load capacity of 850 lbs / 386 kg.